


# ROVECONCEPTS

Refined Luxury Living

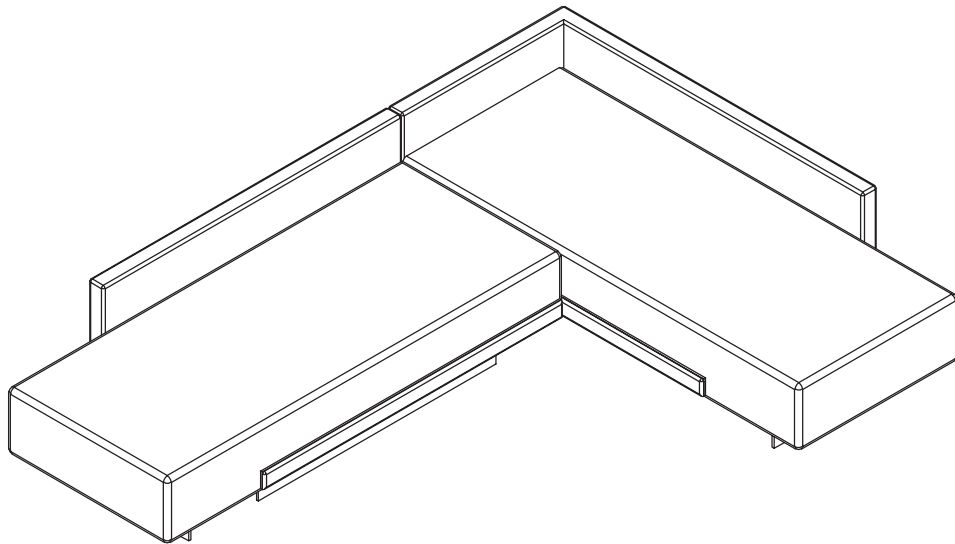

## **DRESDEN SLEEPER SECTIONAL ASSEMBLY INSTRUCTIONS**

# HARDWARE



**A**

x20  
Ø15\*2



**B**


x20  
M8\*20





**C**

x1  
M6

# STEP 1

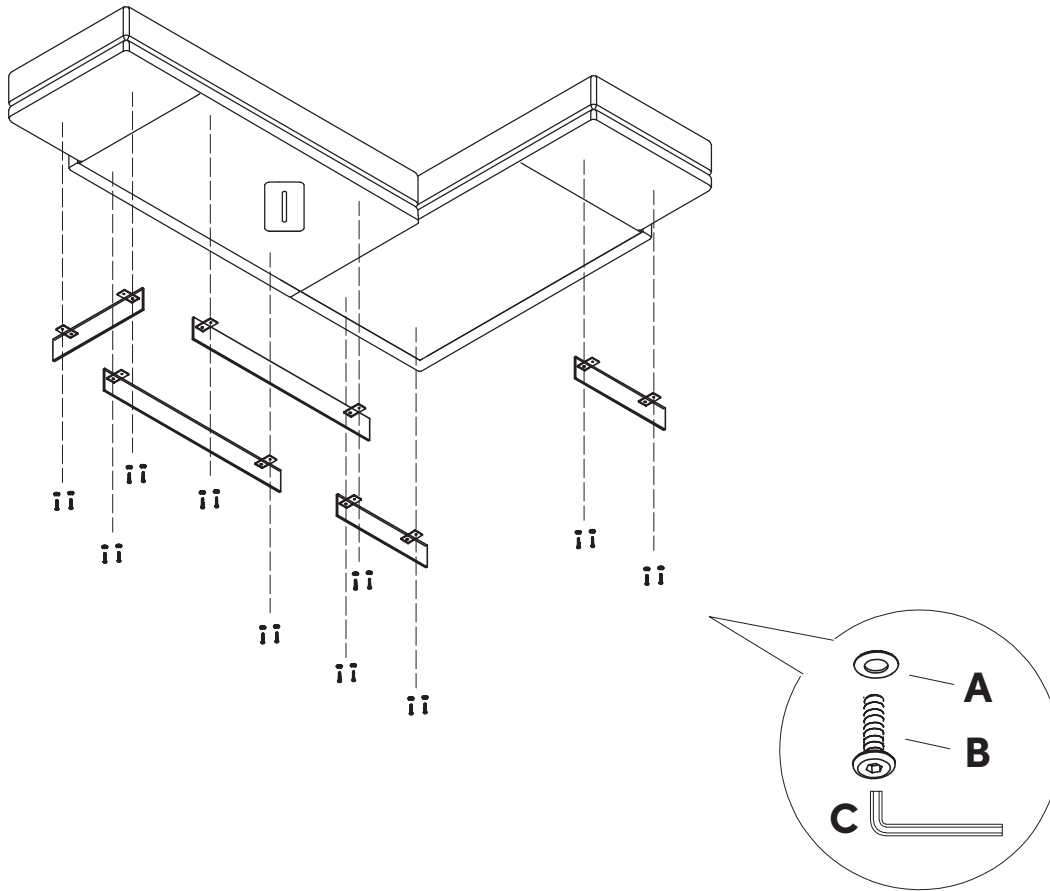

# STEP 2

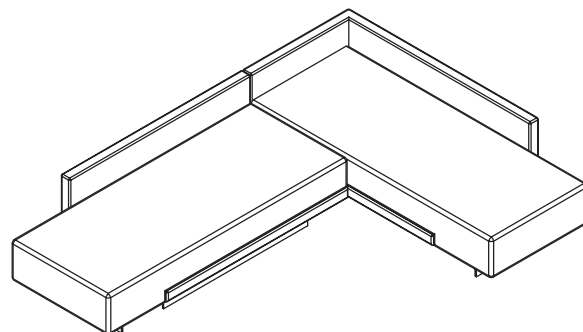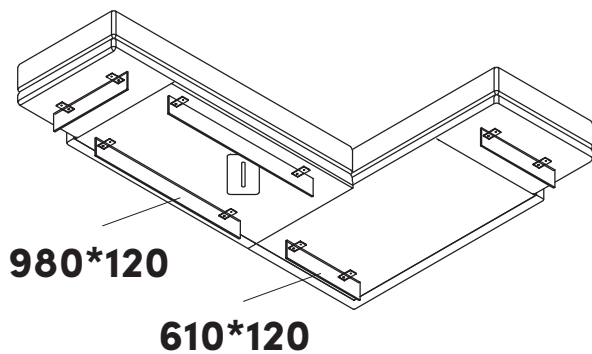

# STEP 3

