



ROVECONCEPTS

Refined Luxury Living

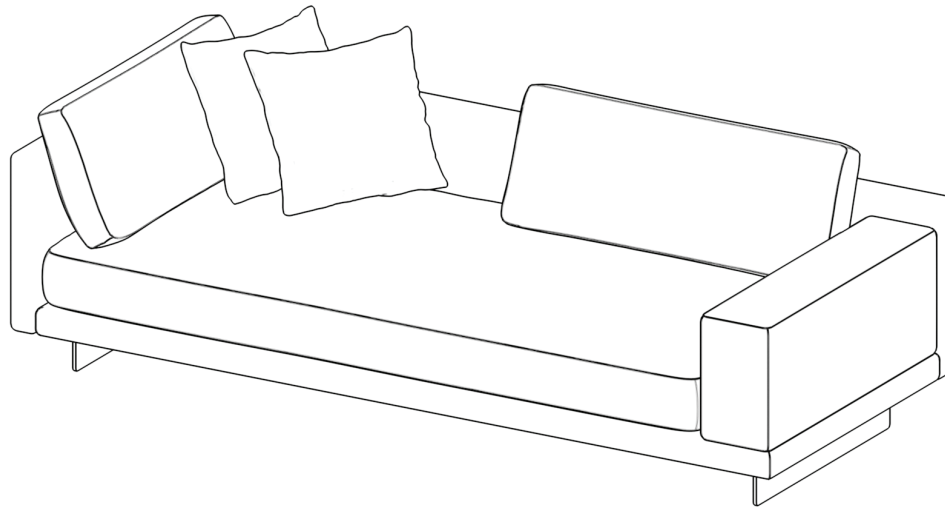


DRESDEN LEFT/RIGHT ARM SOFA ASSEMBLY INSTRUCTIONS

HARDWARE

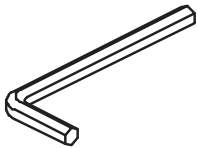

A

x1
M5




B

x8
M8*25



C


x8
Ø17* Ø10*2

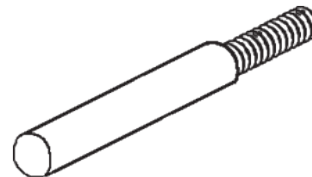


D

x1
Support Leg

STEP 1

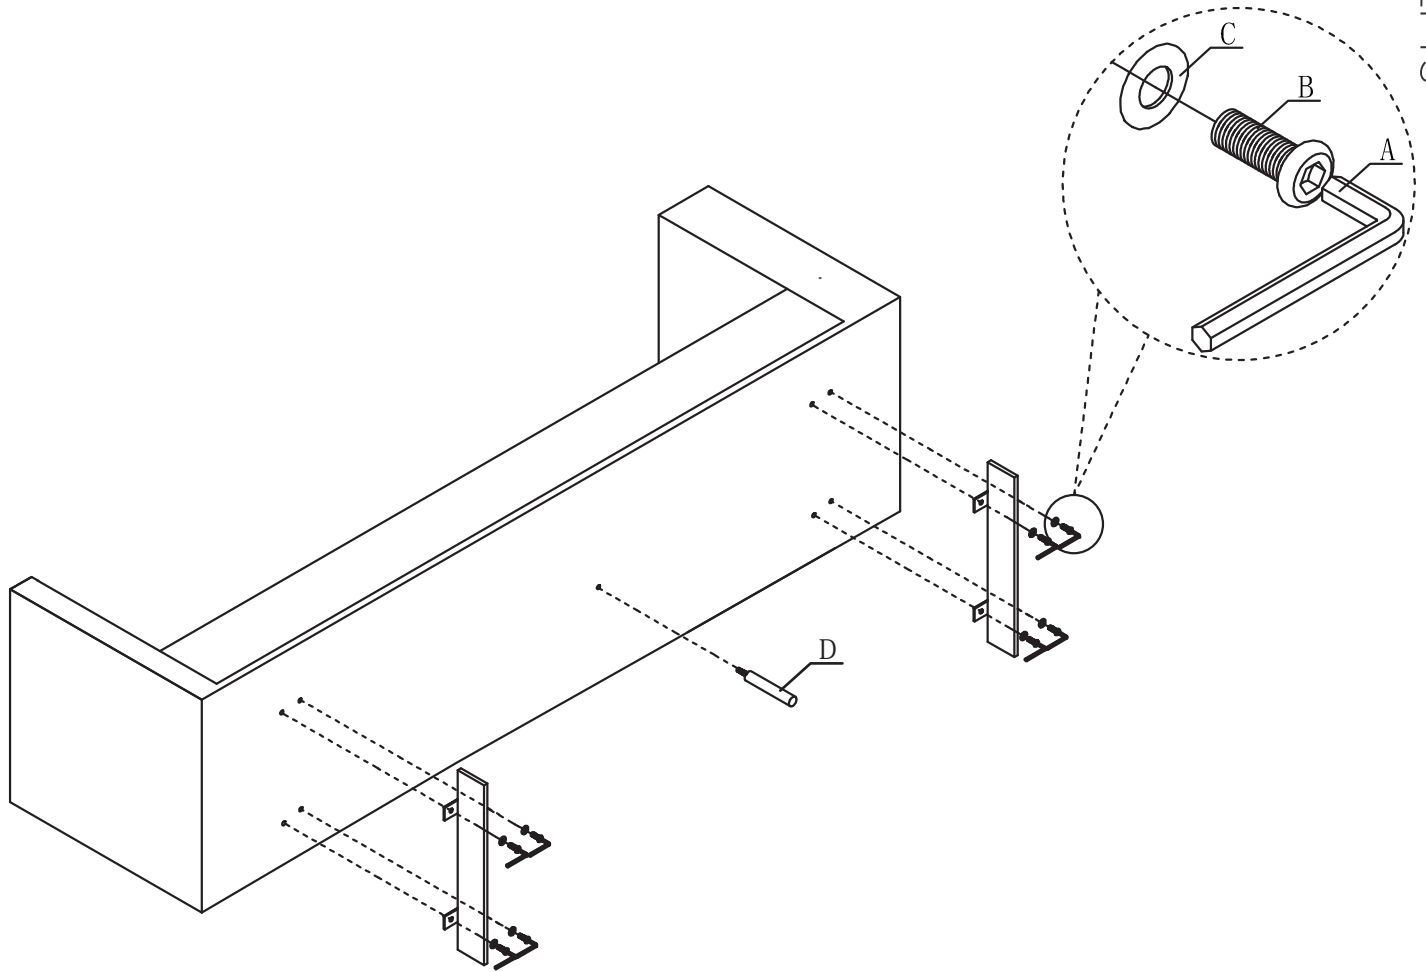

STEP 2

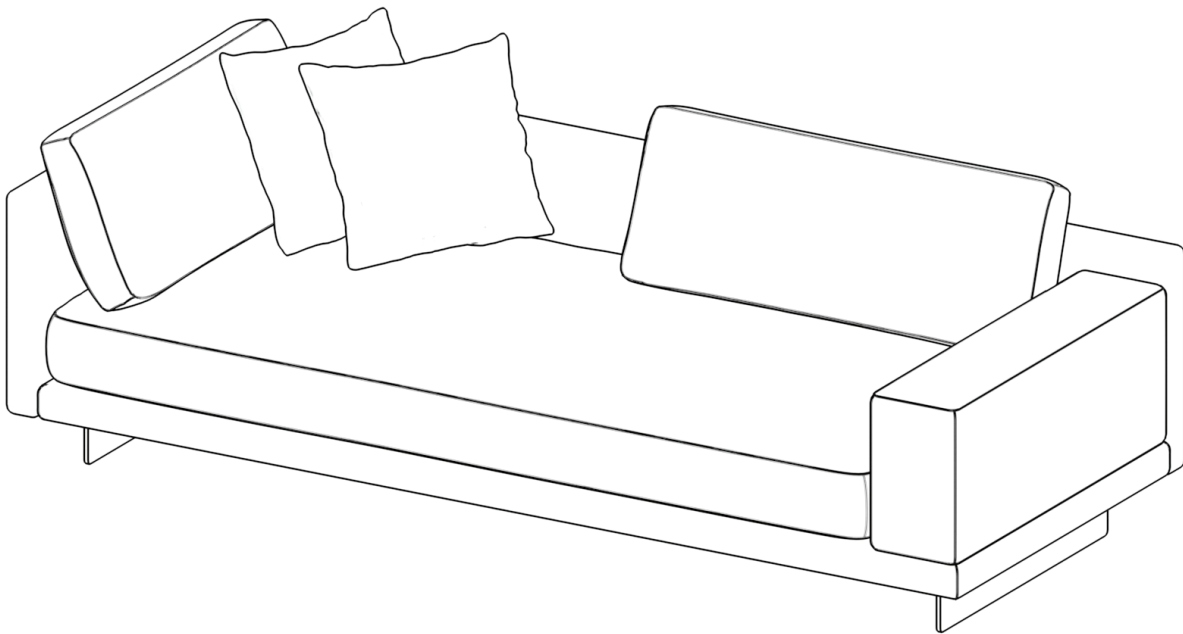

Dresden Left/Right Arm Sofa | 4