


# ROVECONCEPTS

Refined Luxury Living

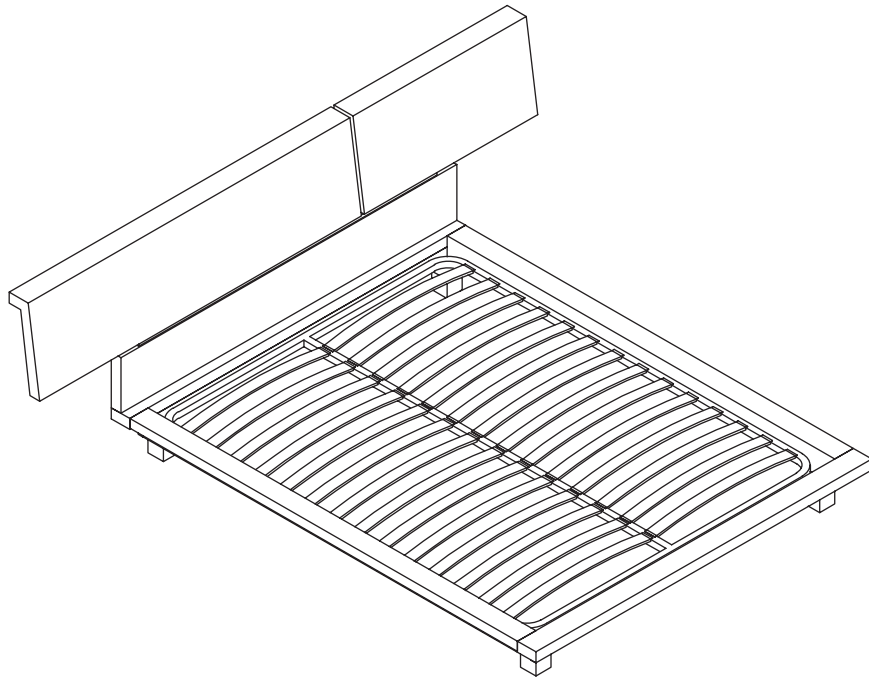

## HUNTER BED - FULL / QUEEN ASSEMBLY INSTRUCTIONS

# HARDWARE



**A**

x16  
M8\*50




**B**

x50  
ø17\* ø8\*2




**C**

x42  
M8\*20




**D**

x16  
ø38



**E**

x8  
M8\*60




**F**

x1  
M5



**G**

x16  
M8



**H**

x1  
M6



**I**

x16  
ø20\* ø8\*2



**J**

x8  
M8\*150



**K**

x2  
14M



**L**

x8  
M8\*50



**M**

x8  
M8\*105



**N**


x8  
M8




**O**

x1


# STEP 1

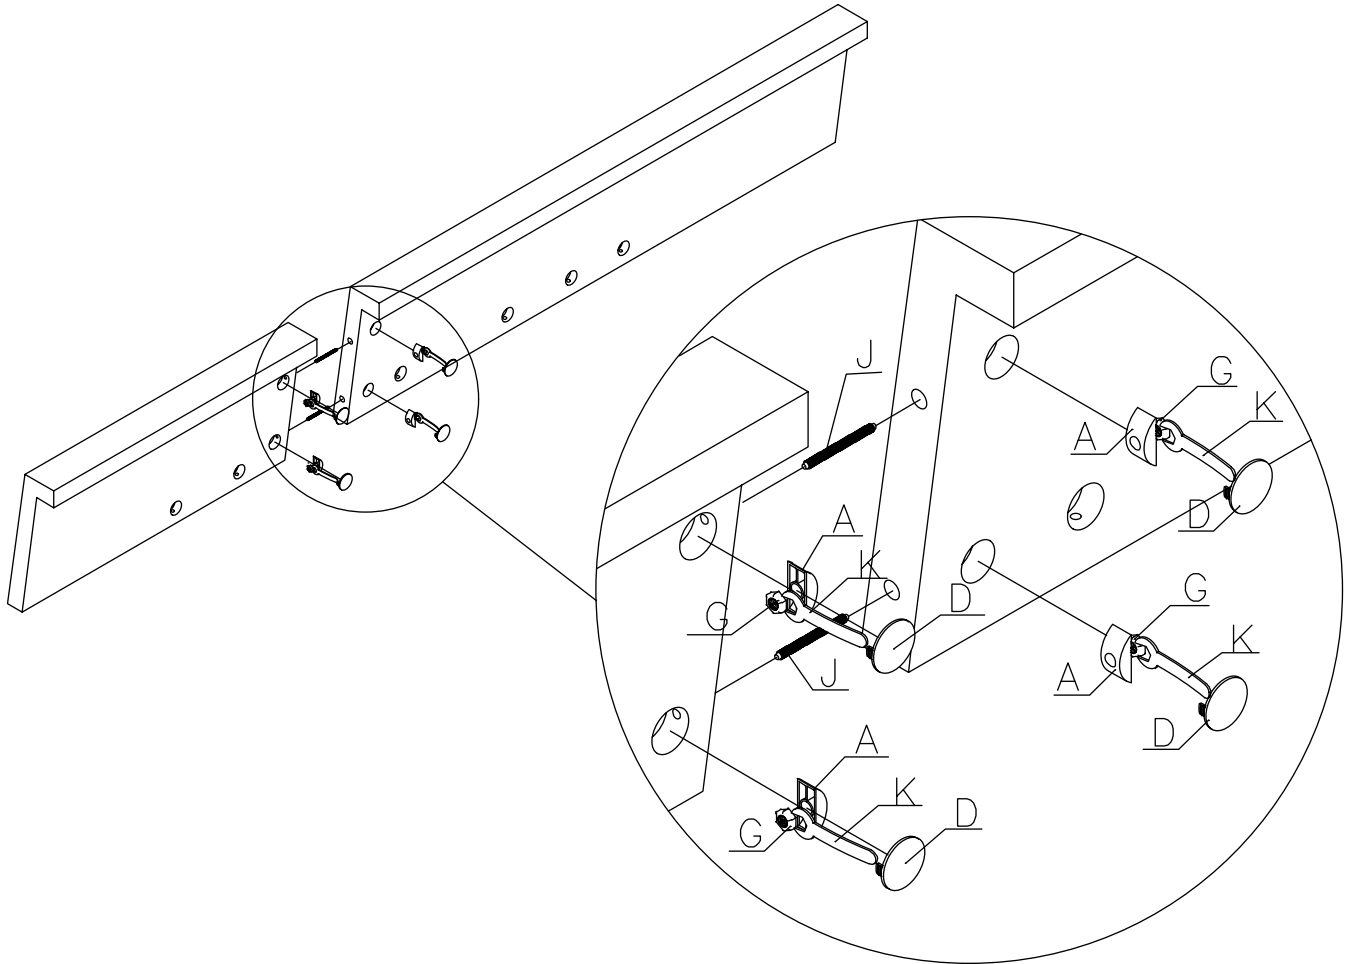


# STEP 2

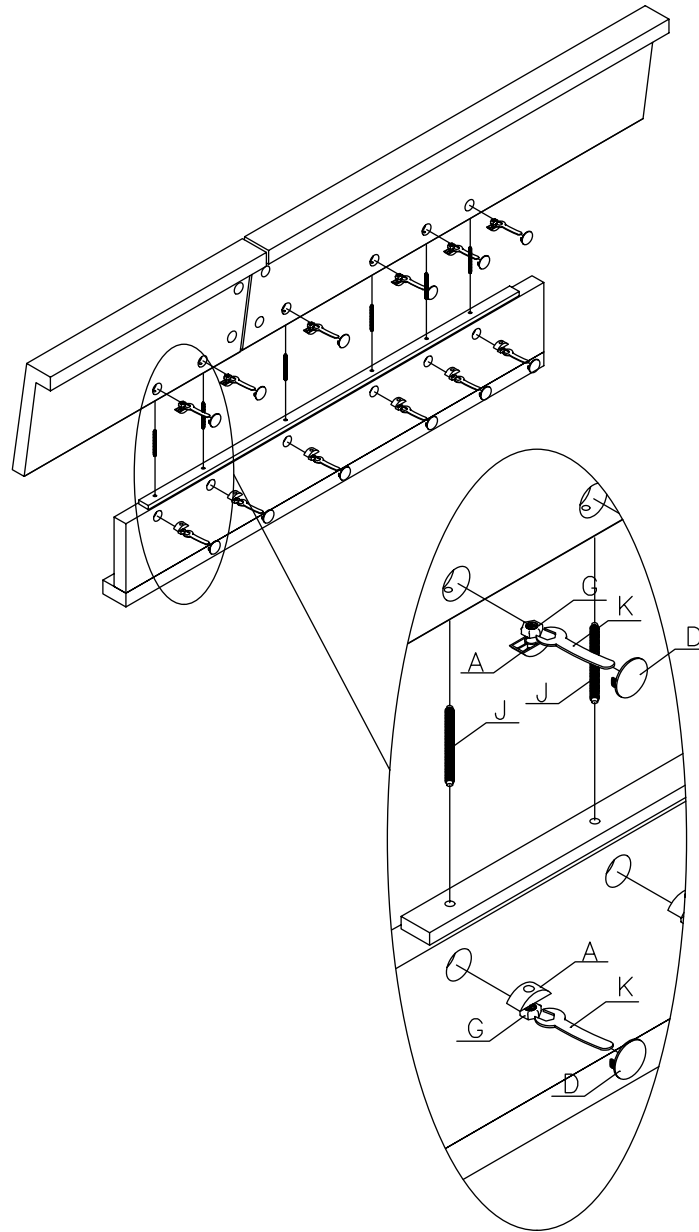


# STEP 3

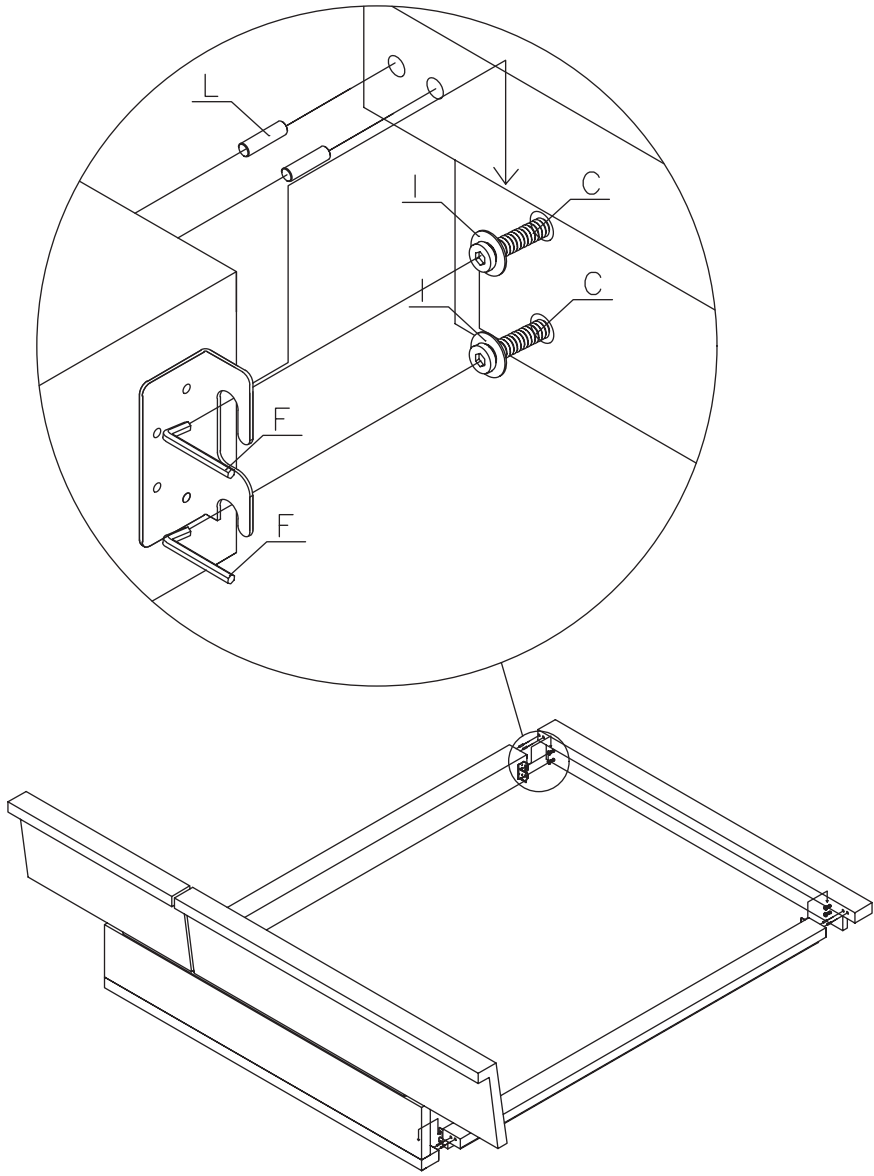


# STEP 4

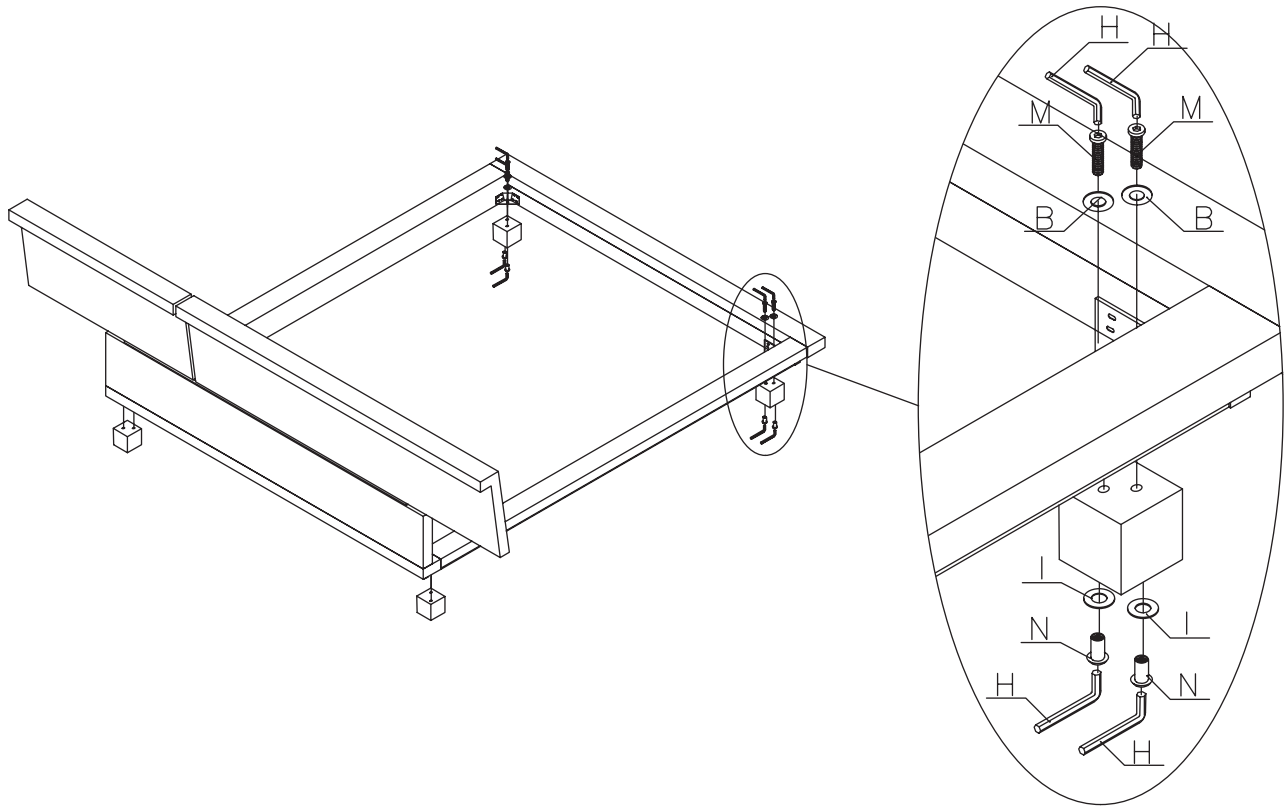

# STEP 5

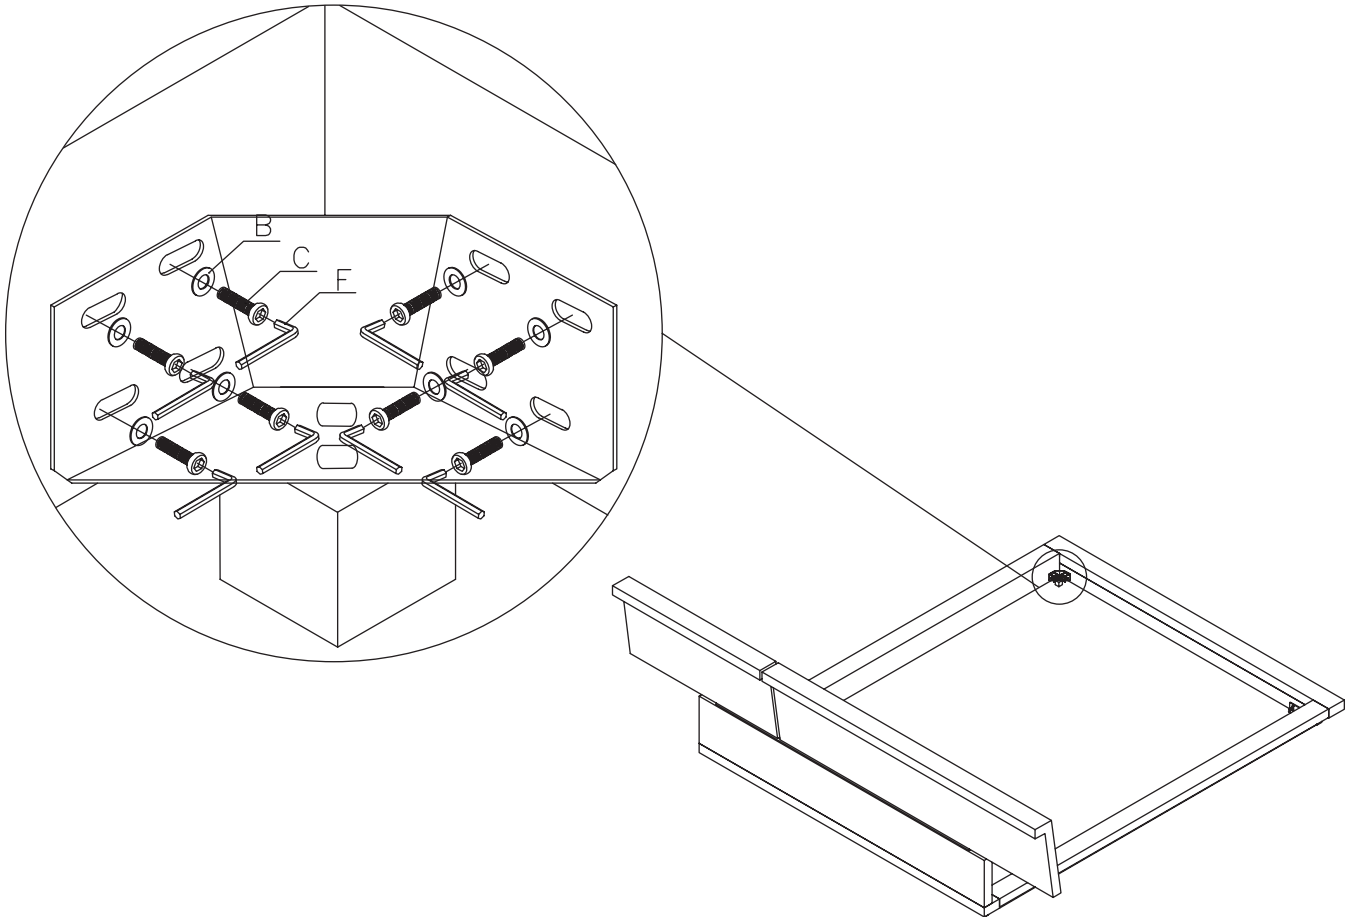


# STEP 6

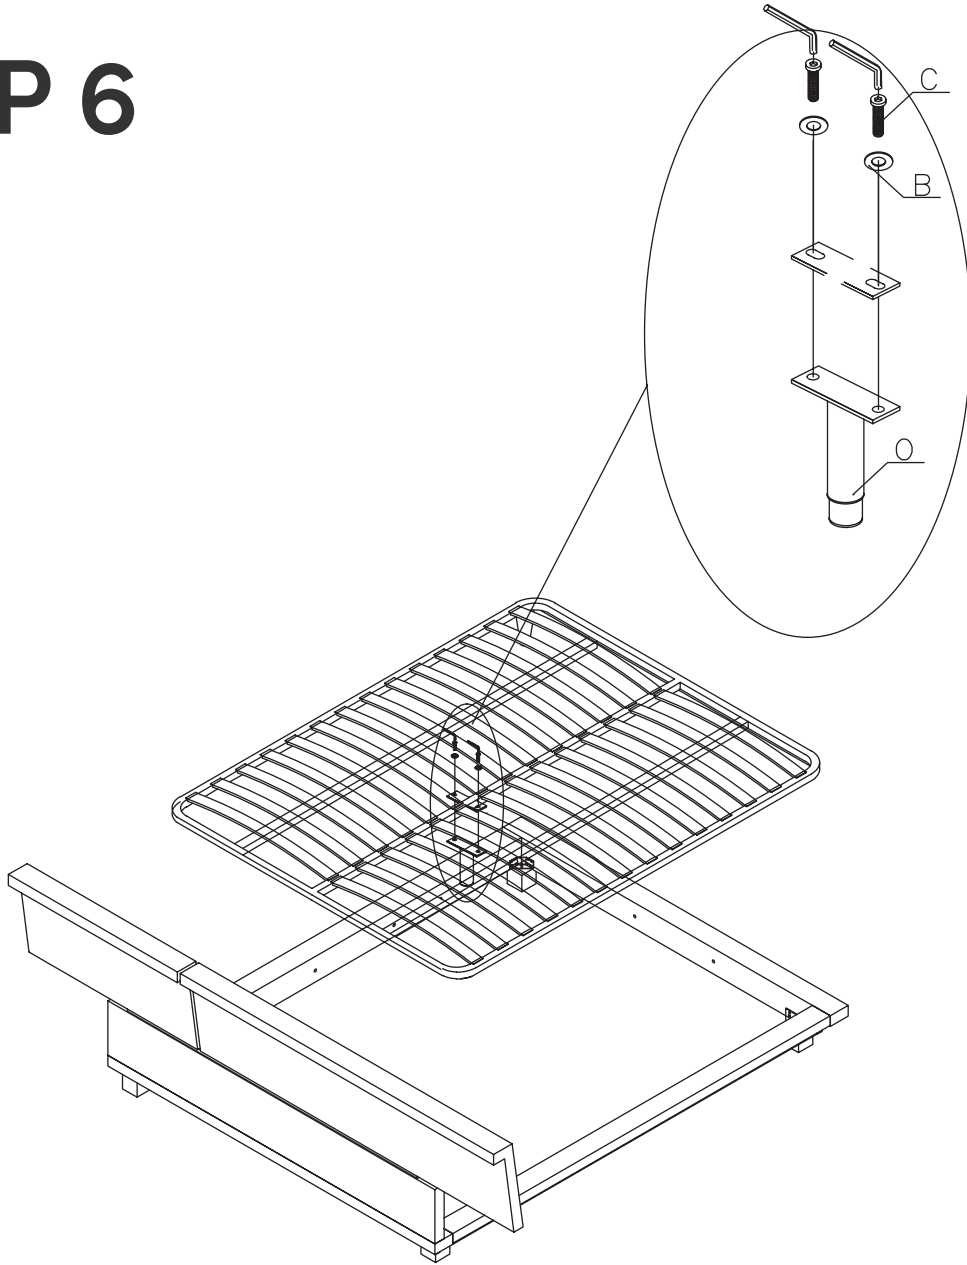



# STEP 7

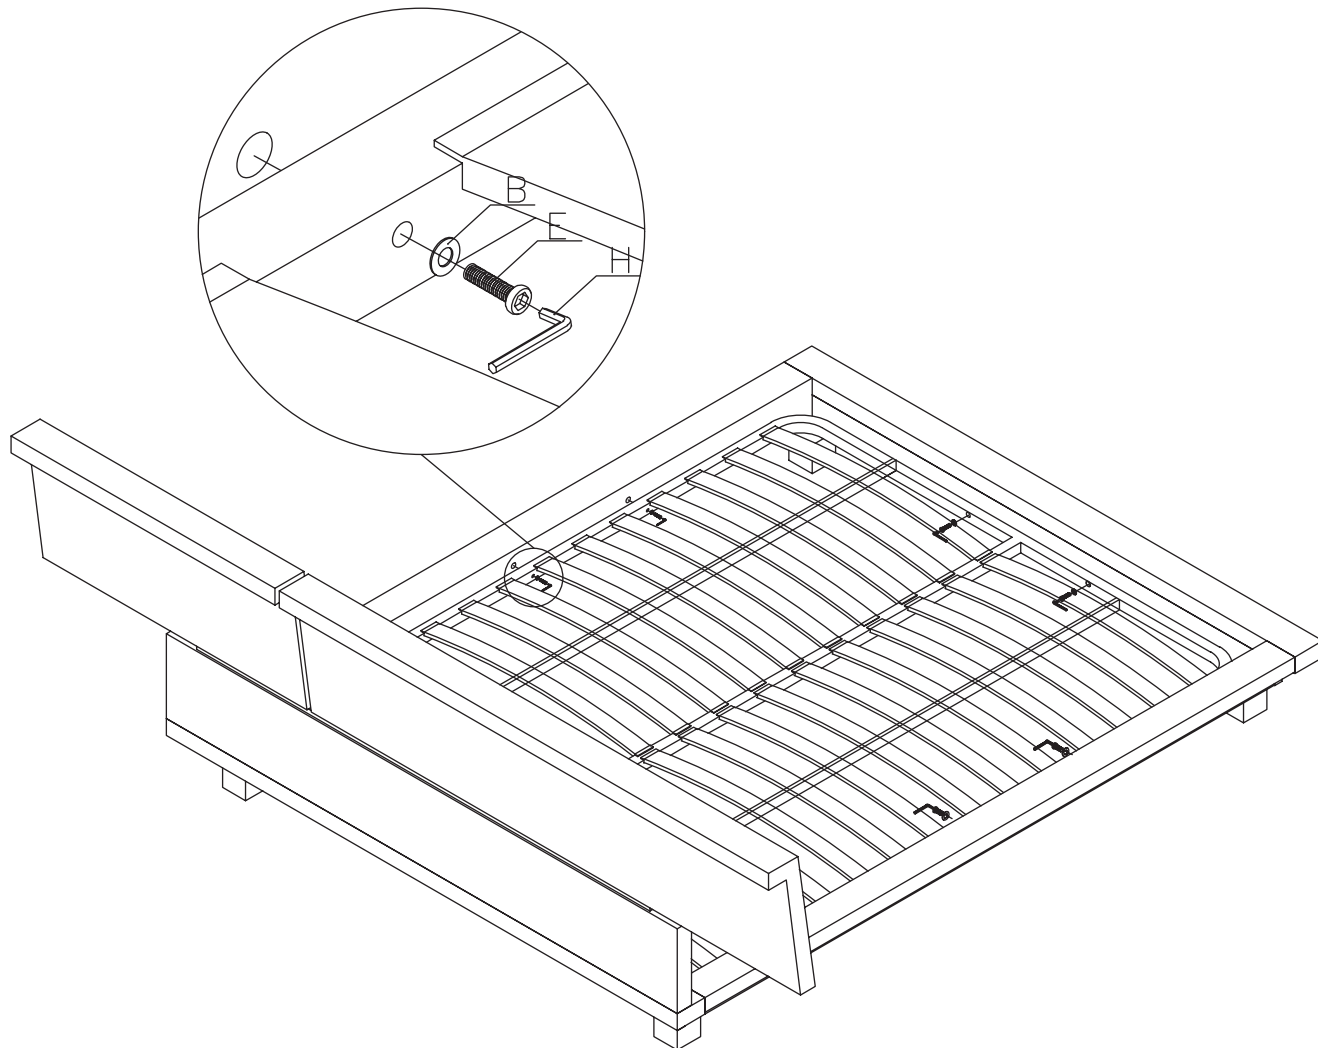

# STEP 8

