


ROVECONCEPTS

Refined Luxury Living

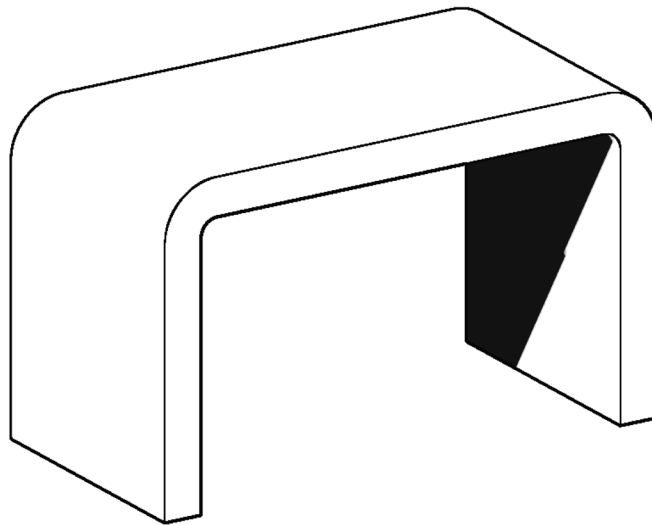

CASCADIA DESK
ASSEMBLY INSTRUCTIONS

HARDWARE



A

x4
18mm Screw Rod



B


x4
18mm Nut Gasket



C

x4
18mm Nut


STEP 1

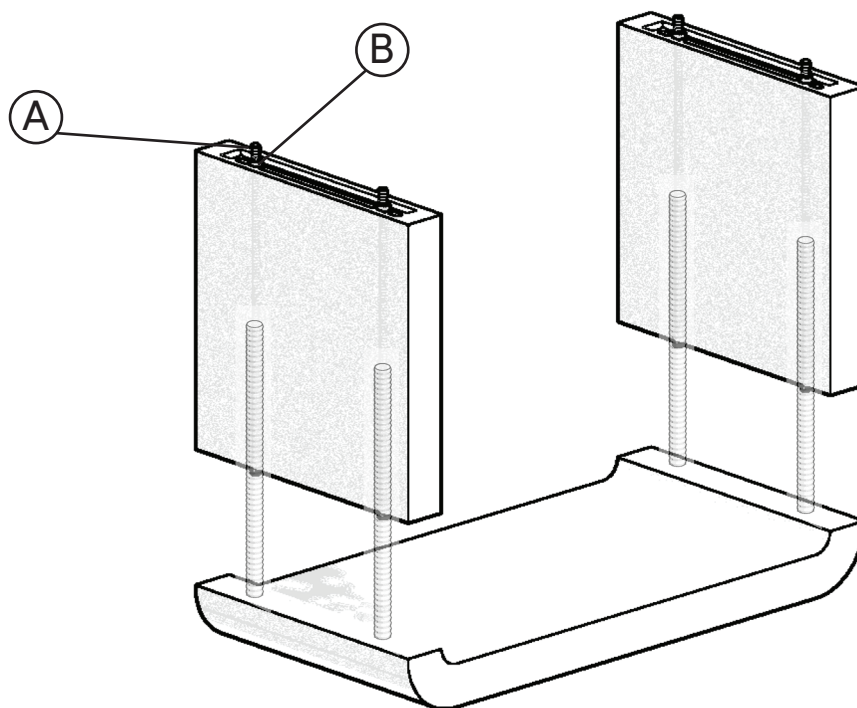

1. Turn the desktop upside down with the bottom facing up.
2. Put in the 18mm screw rods into the screw hole at the bottom of the desktop.
3. Place the table legs in the corresponding rods position.
4. Put the 18mm nut gaskets.


*There is a groove screw position at the bottom of the table legs.

STEP 2

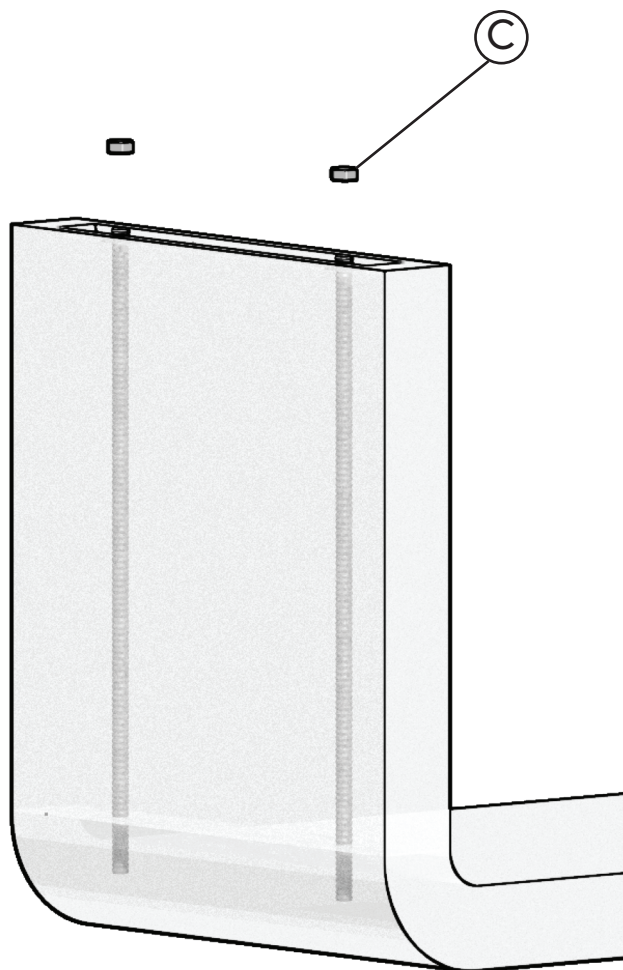

Fix the screw and gasket,
and then put in 18mm nut.

STEP 3

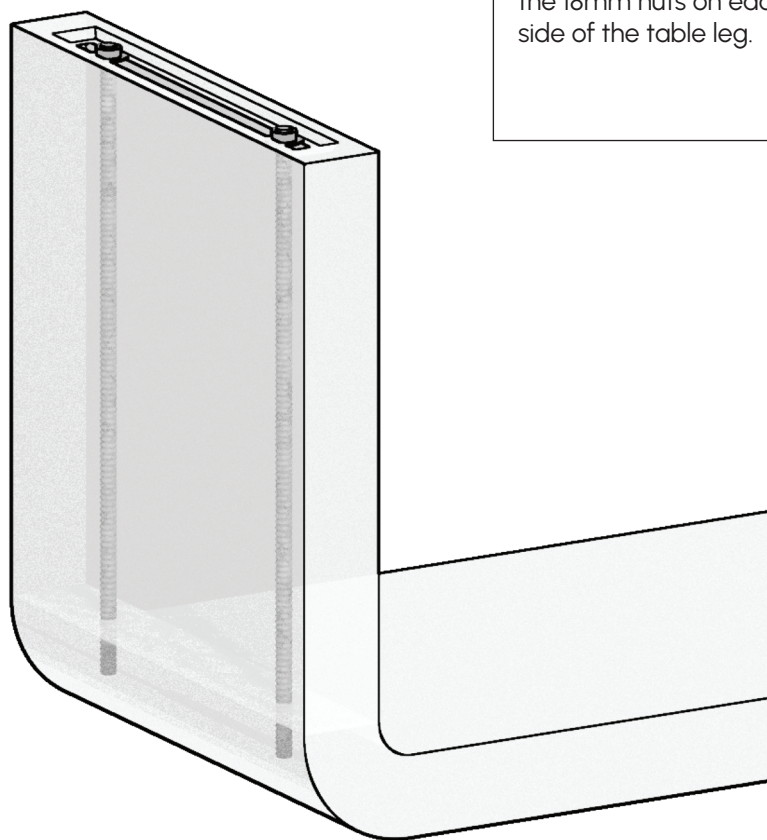

Use wrench to tighten
the 18mm nuts on each
side of the table leg.

STEP 4

