




ROVECONCEPTS

Refined Luxury Living

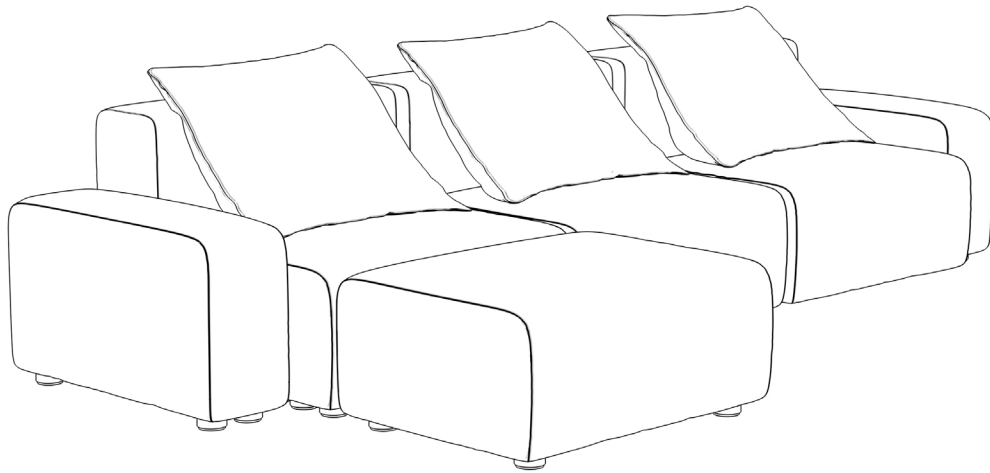


**KAYE MODULAR COLLECTION
ASSEMBLY INSTRUCTIONS**

HARDWARE

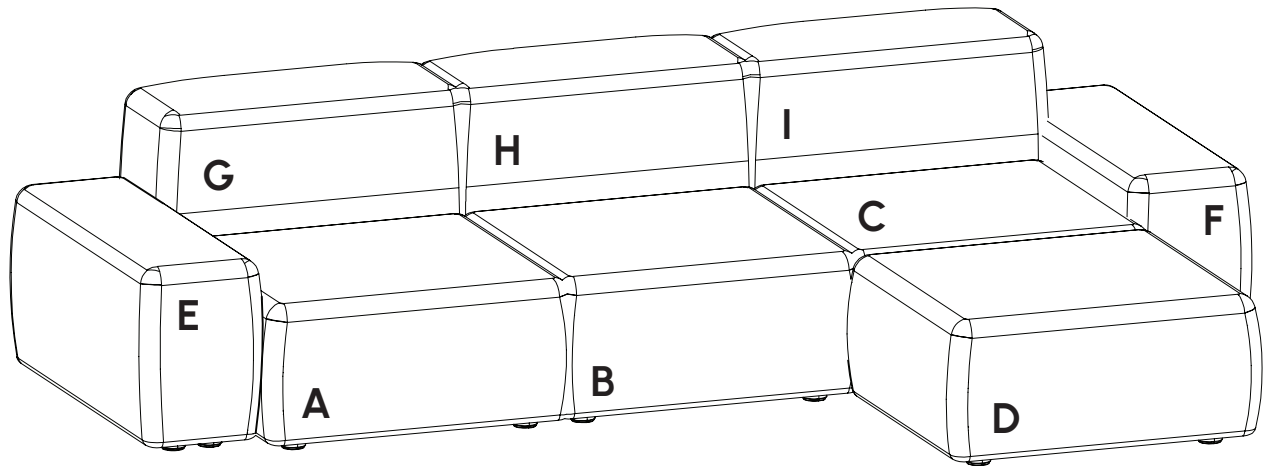

J


x40

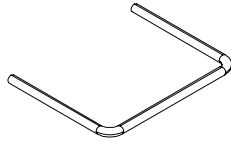


K

x18


STEP 1

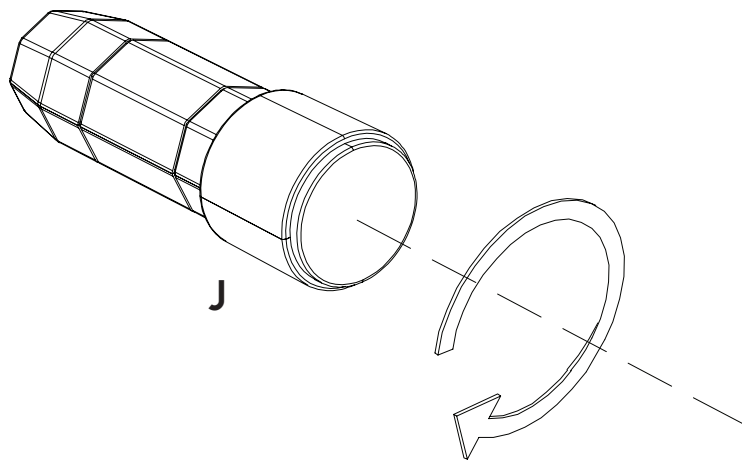


STEP 2

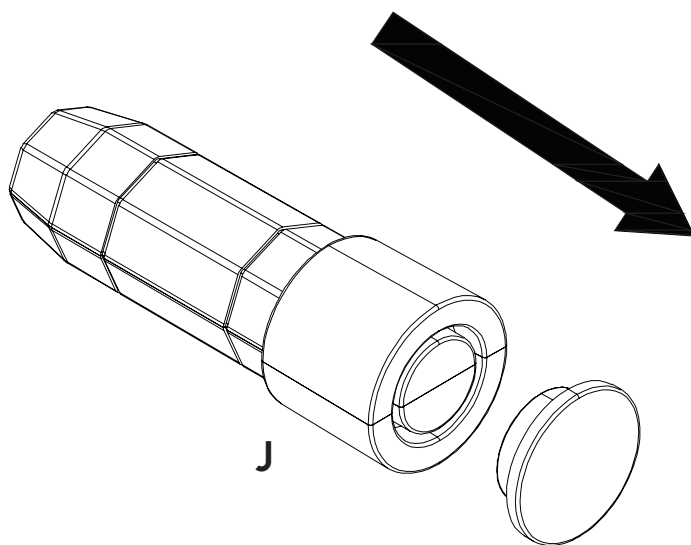


STEP 3

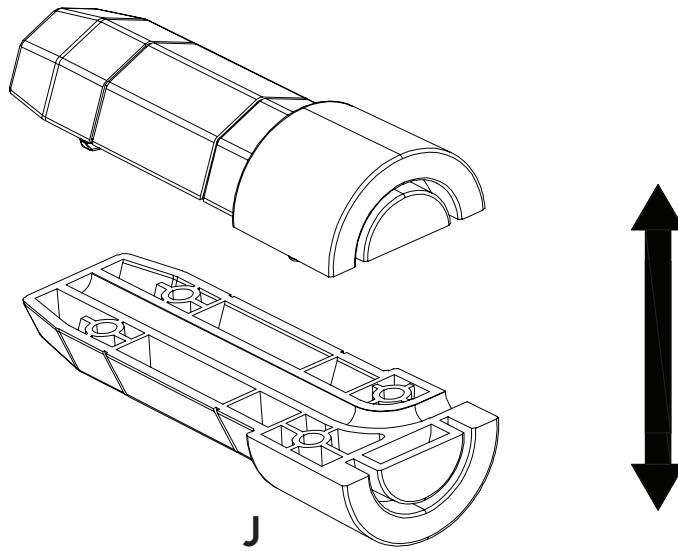


STEP 4

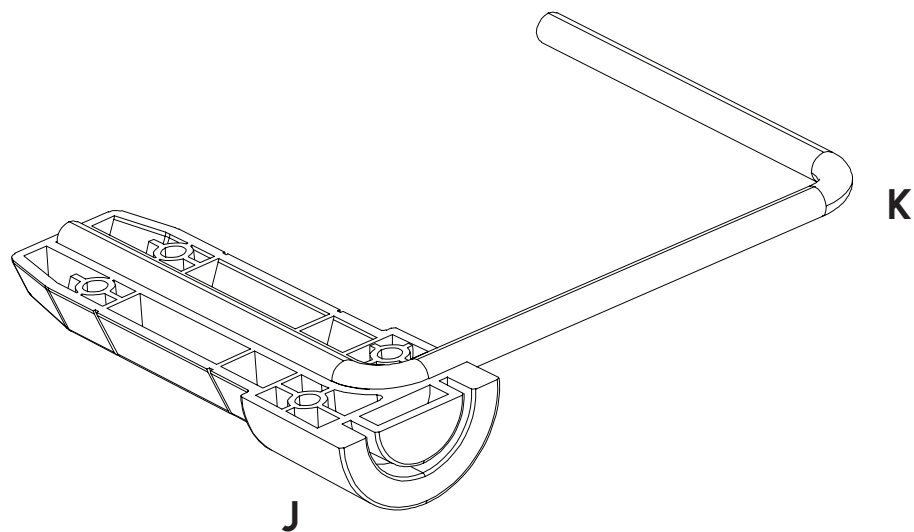


STEP 5

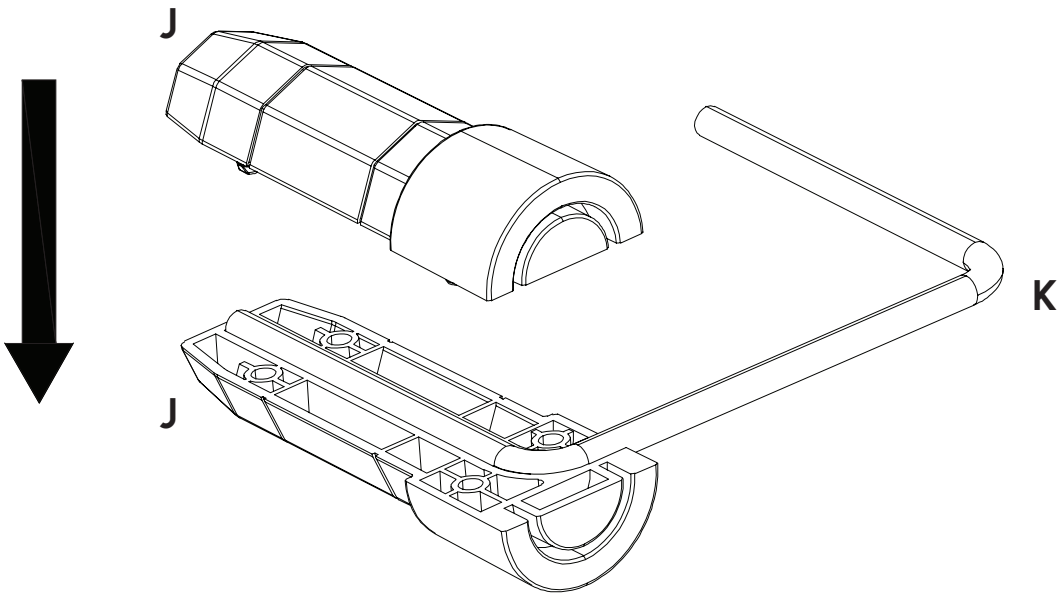


STEP 6

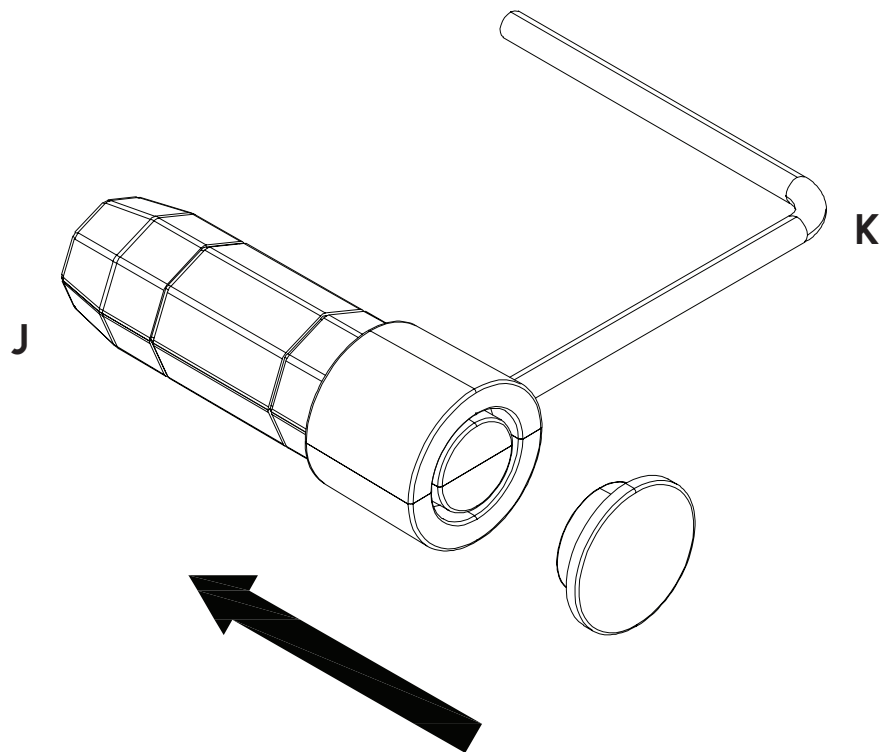



STEP 7

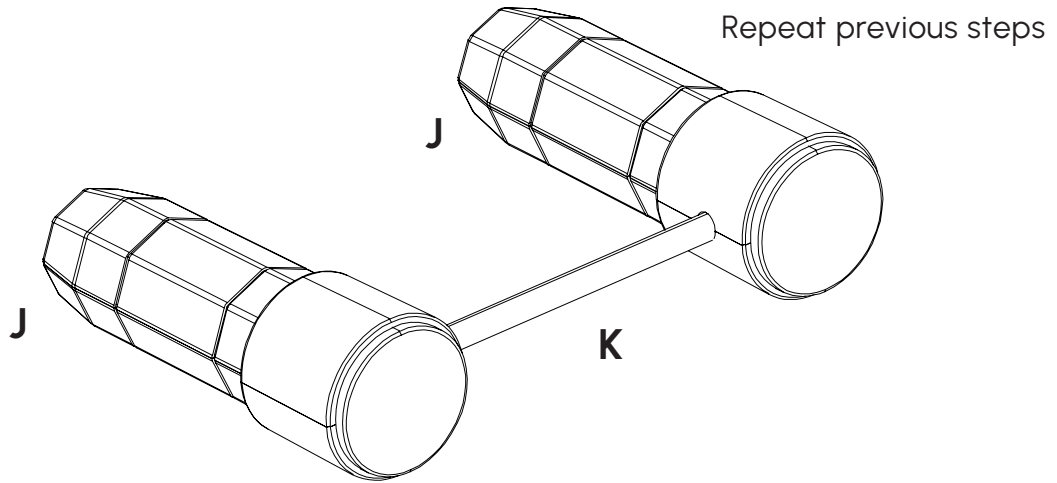



STEP 8

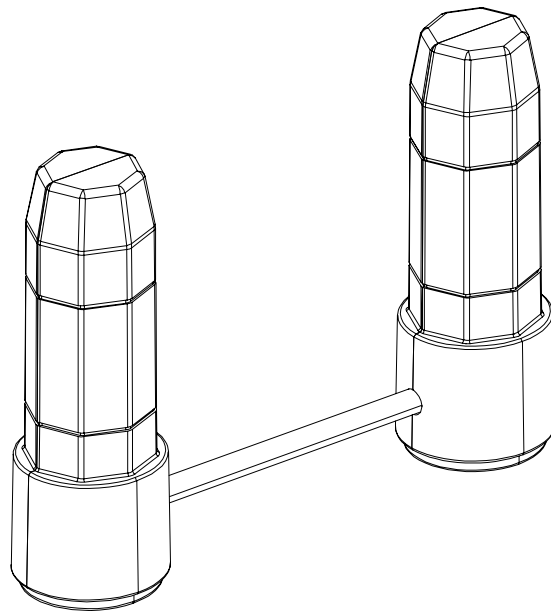


STEP 9

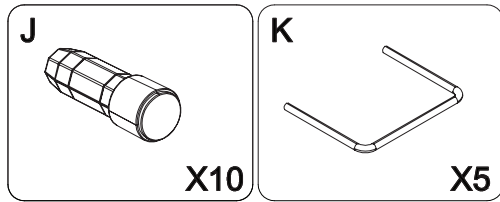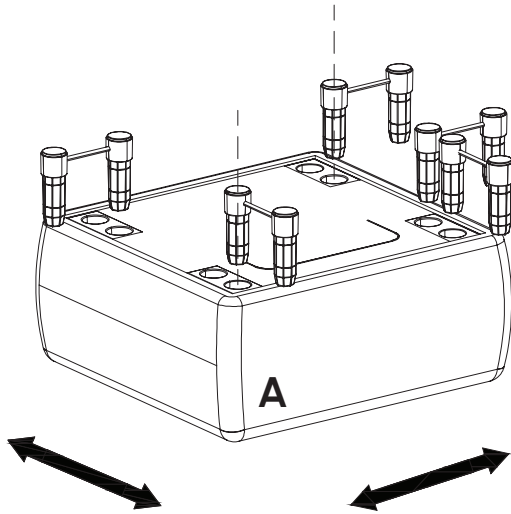




STEP 10

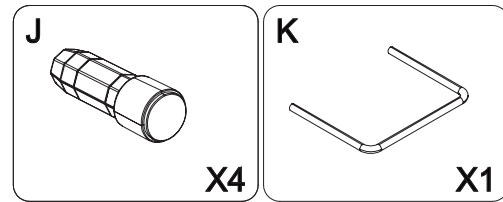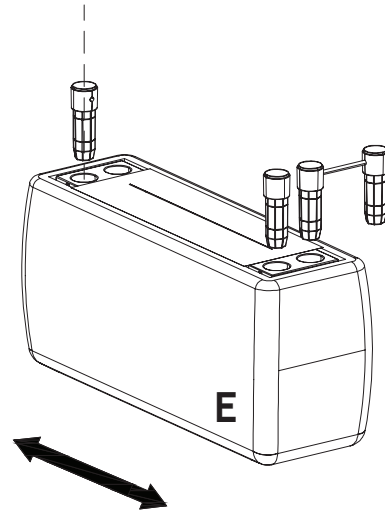


STEP 11

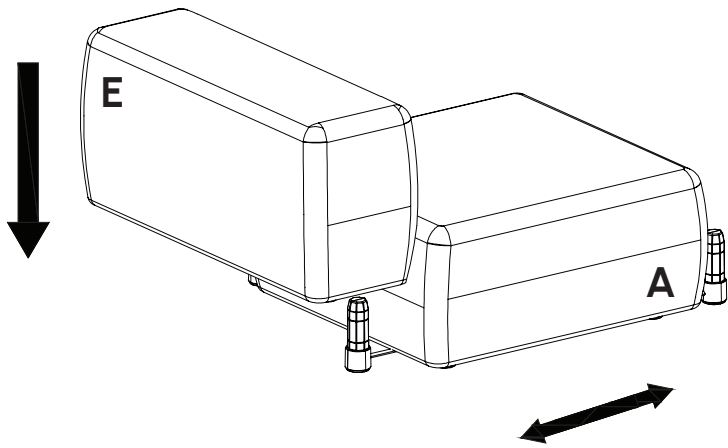




STEP 12

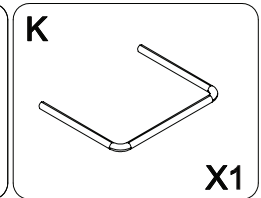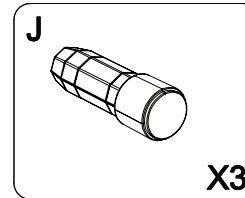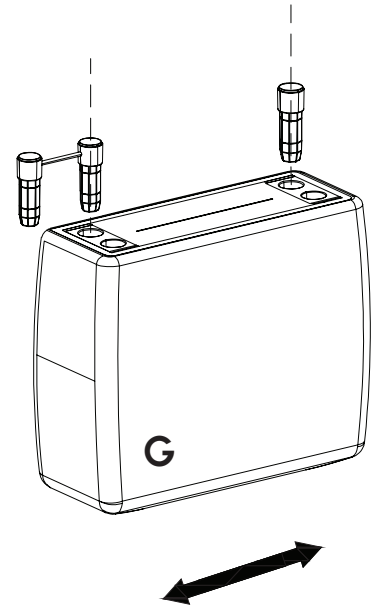


STEP 13

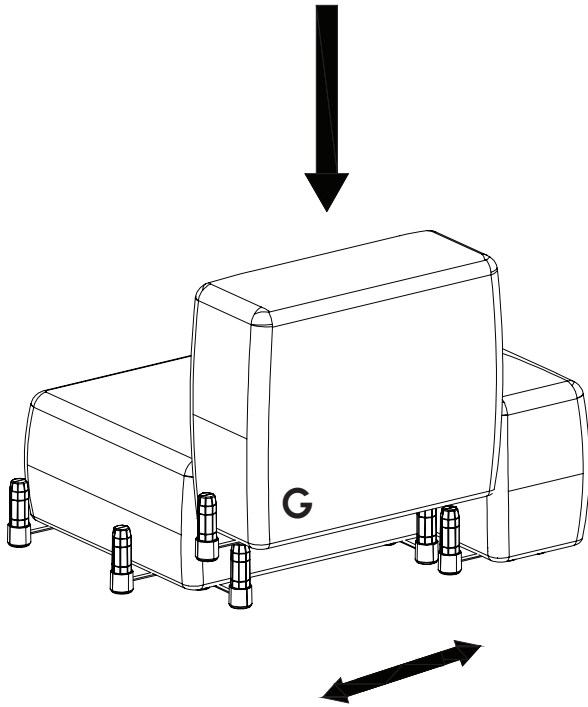




STEP 14

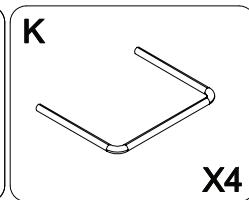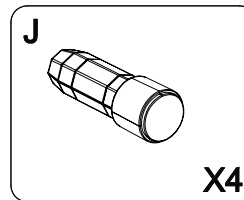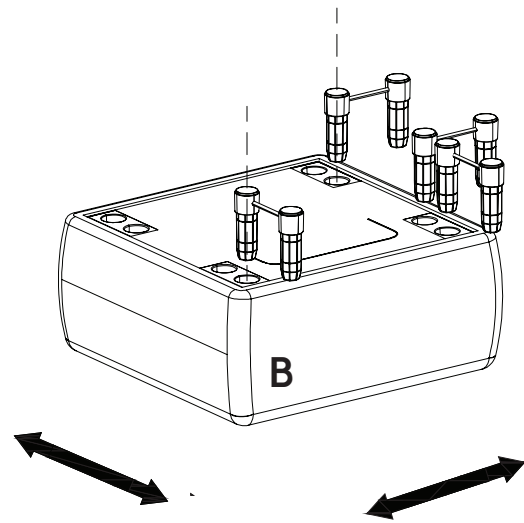


STEP 15

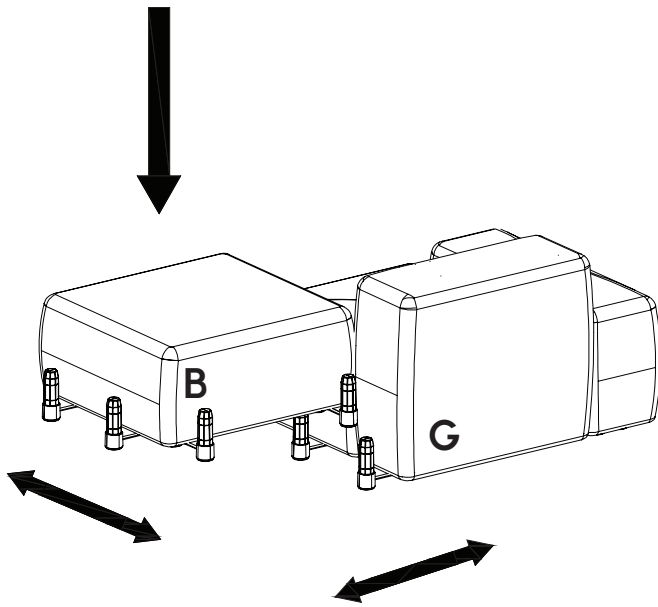




STEP 16

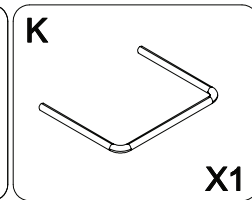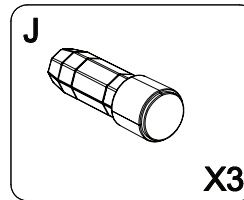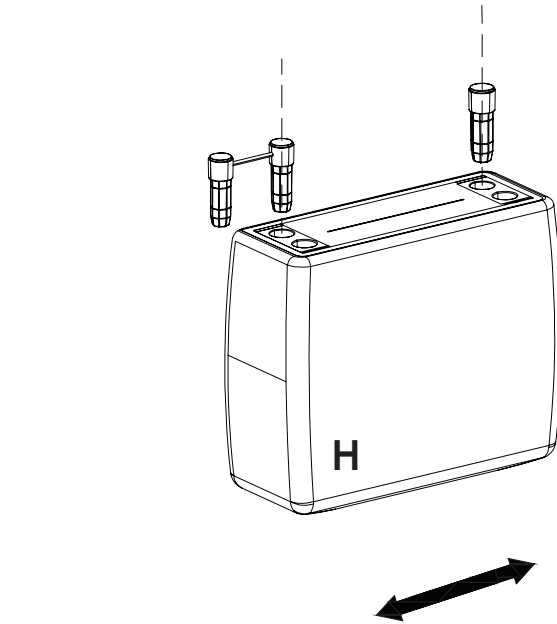


STEP 17

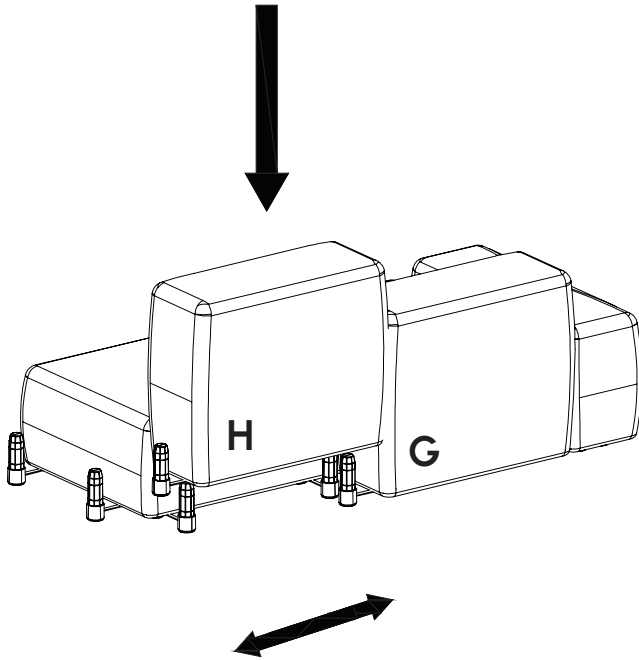



STEP 18

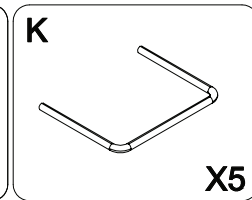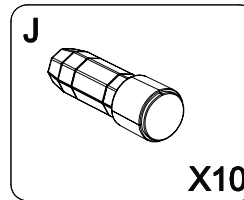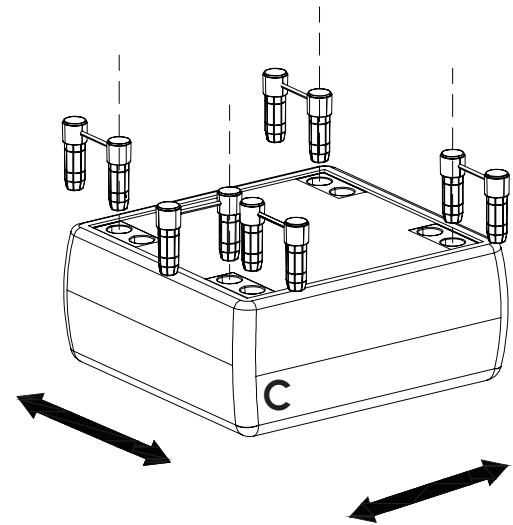



STEP 19

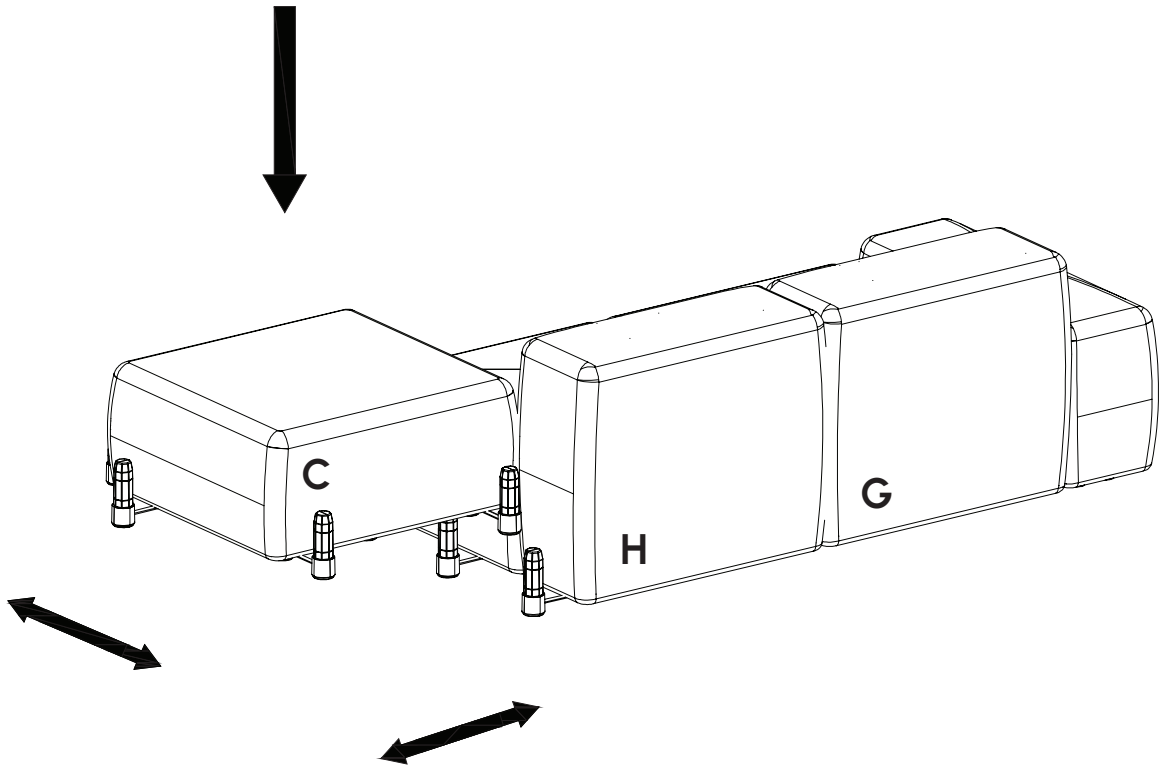


STEP 20

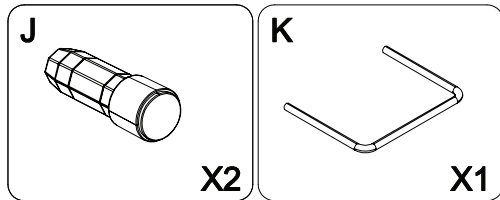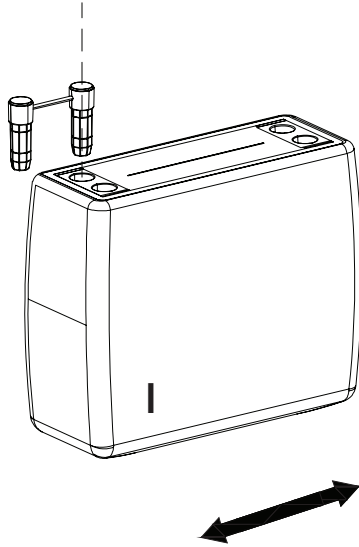


STEP 21

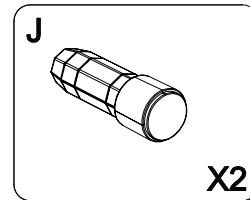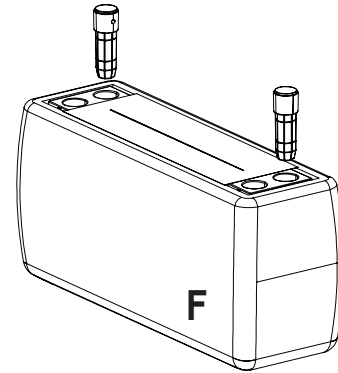



STEP 22

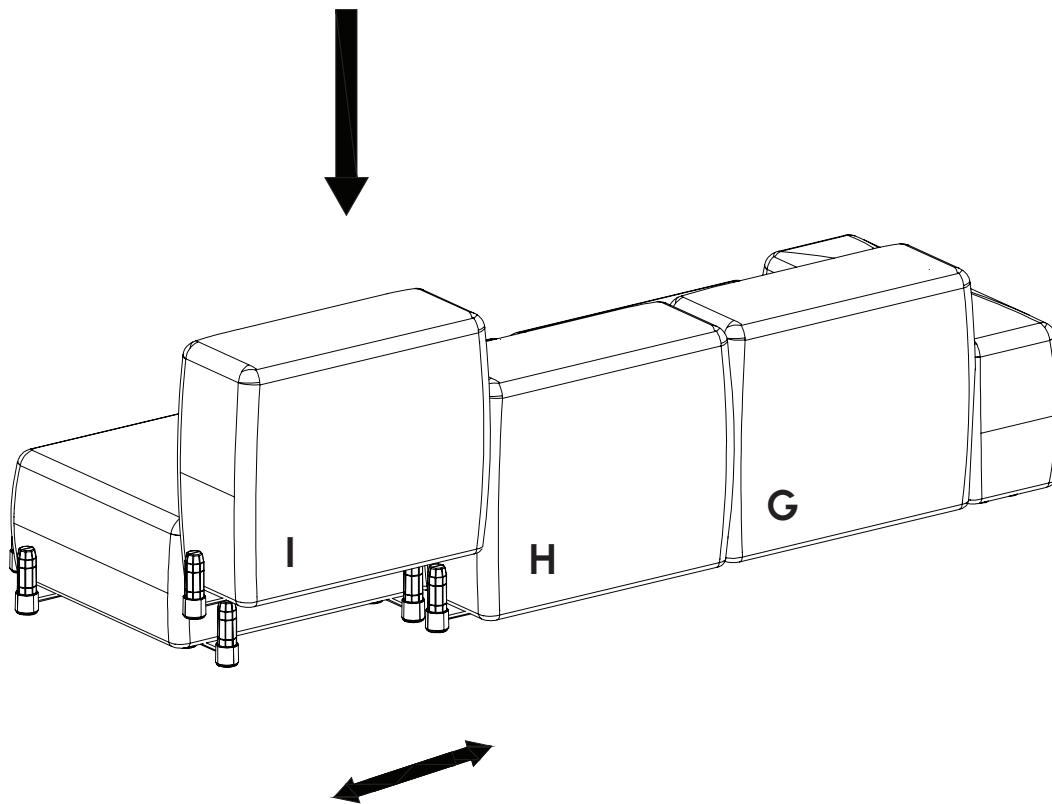


STEP 23

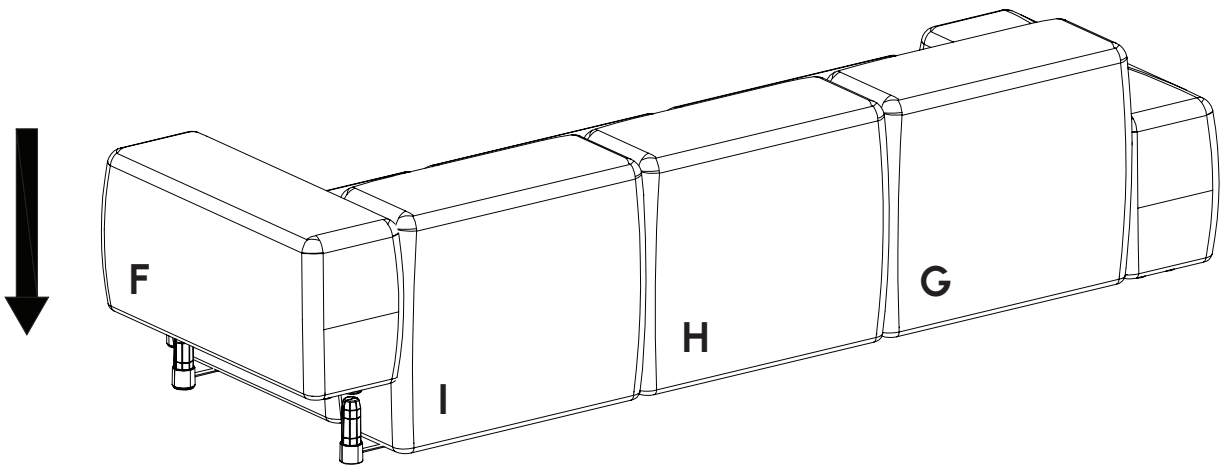

STEP 24

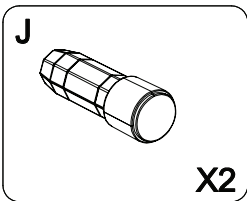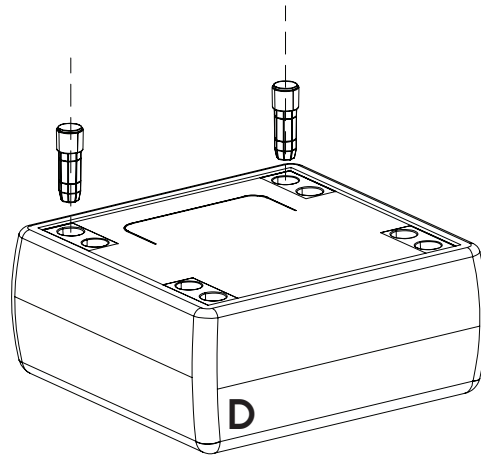

STEP 25

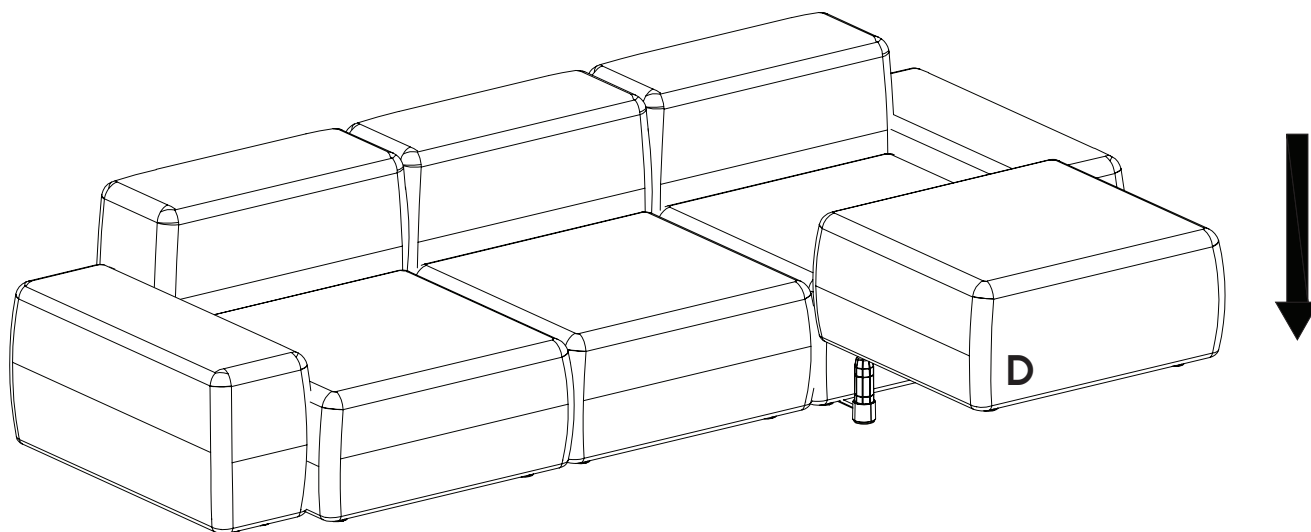

STEP 26

