



# ROVECONCEPTS

Refined Luxury Living

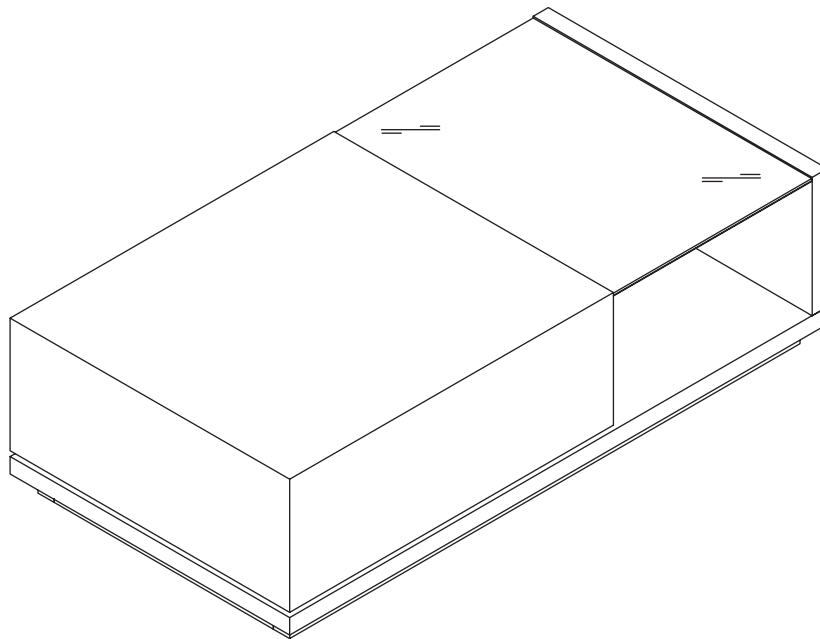


## TRUMAN COFFEE TABLE ASSEMBLY INSTRUCTIONS

# HARDWARE

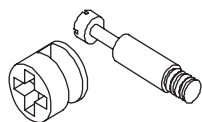


**A**

x6 Sets  
Ø15



**B**

x6  
Ø15




**C**

x3  
M8\*50




**D**

x3  
Ø22\*10

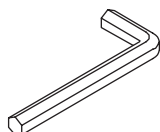

**E**

x1  
6mm




**F**

x4  
M6\*40



**G**

x4  
Ø13\*7



**H**


x1  
4mm



**I**

x6  
Ø15

# STEP 1

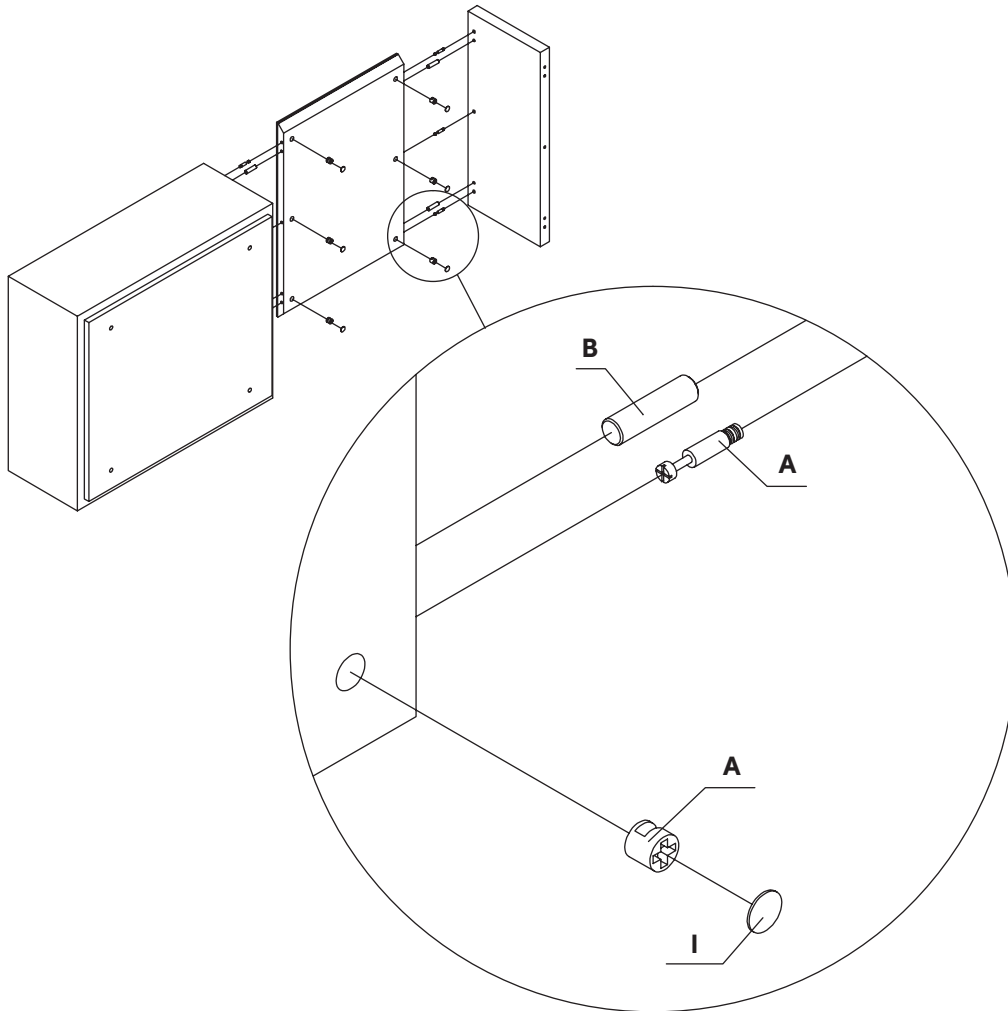

# STEP 2

