


ROVECONCEPTS

AUBREY SIDE CHAIR ASSEMBLY INSTRUCTIONS

HARDWARE

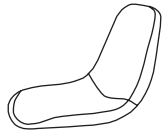

A

x1



B

x1



C

x4
M6x45



D


x4
M6



E

x1
M6

STEP 1

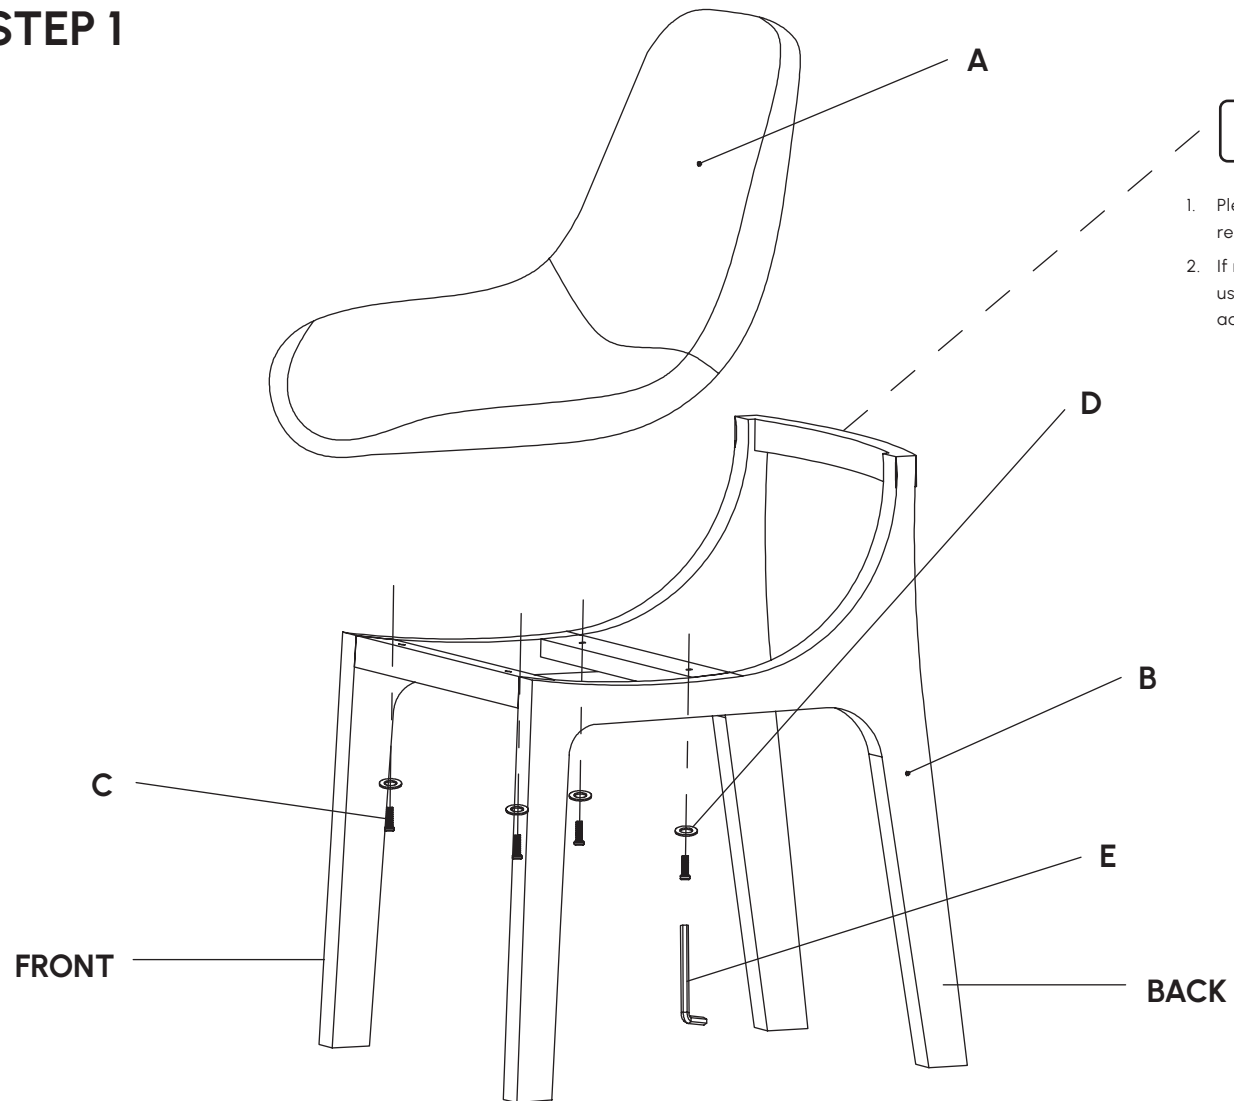

ROVECONCEPTS

1. Please hold the tag and tape together when removing the Rove Concepts tag
2. If residual adhesive is left on the product, please use an oil-based solution to remove the remaining adhesive glue

Install the rear two screws first; then the front two screws next. **DO NOT** overtighten until all screws is in place.