




# ROVECONCEPTS

Refined Luxury Living

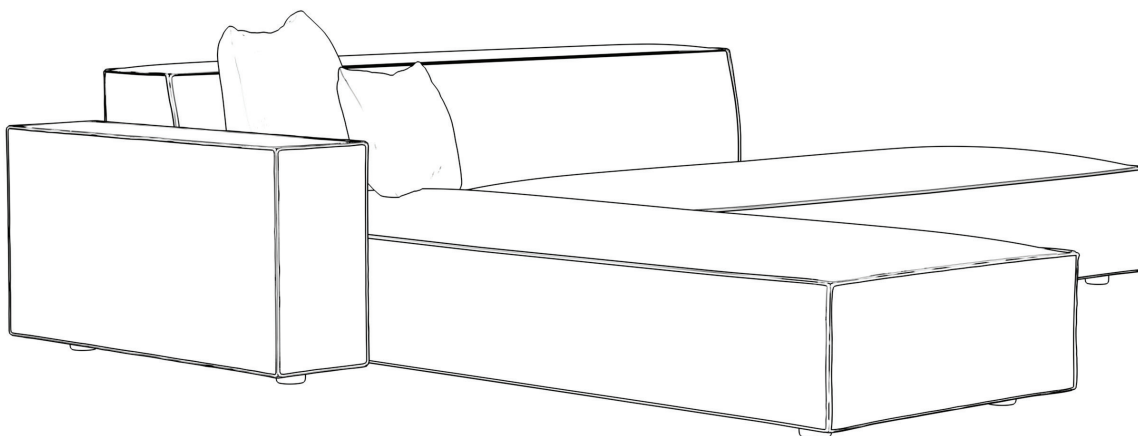

## PORTER SLEEPER SECTIONAL ASSEMBLY INSTRUCTIONS






# HARDWARE

ROVECONCEPTS



**A**

x28  
ø16\*M8\*2

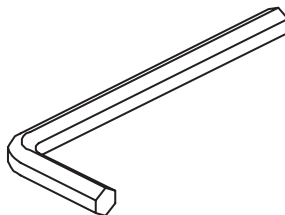

**B**

x1  
M6



**C**

x28  
ø20\*ø10\*2




**D**

x16  
ø9\*25

Porter Sectional Sleeper | 2




# STEP 1

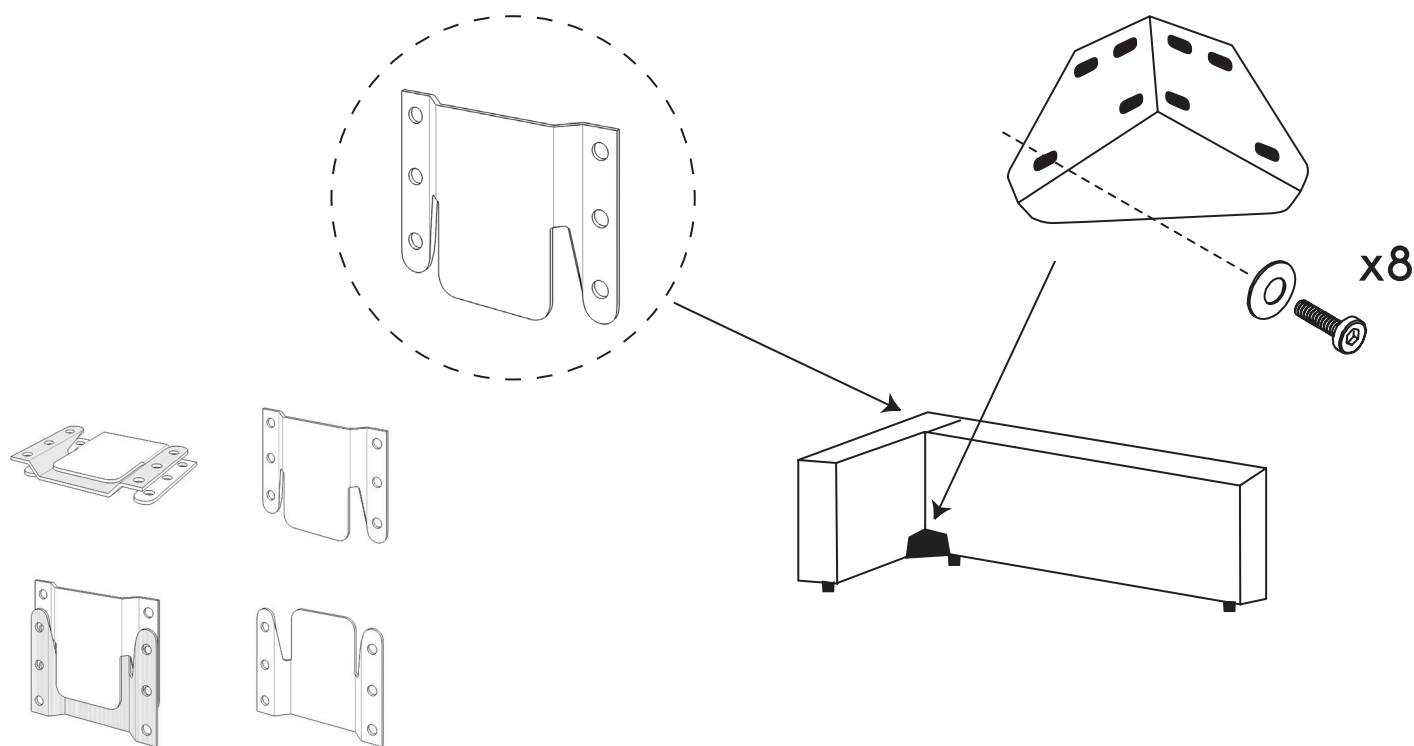



# STEP 2

ROVECONCEPTS


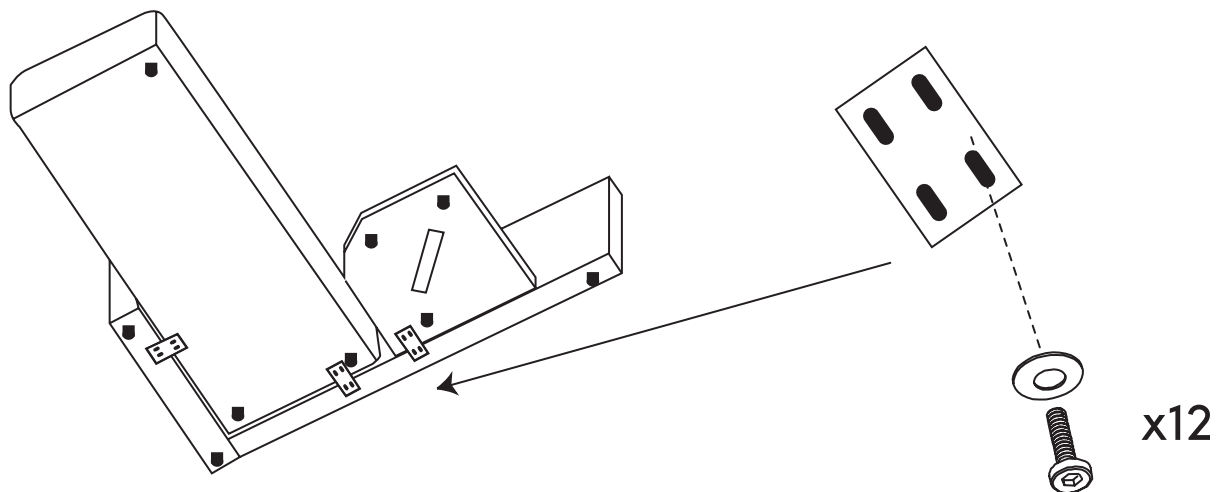


Porter Sectional Sleeper | 4






# STEP 3

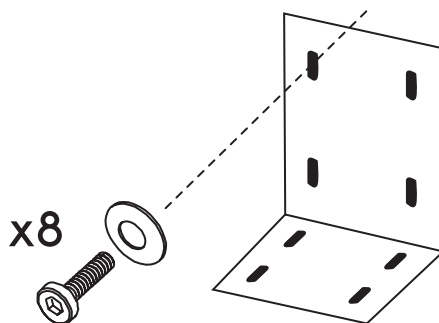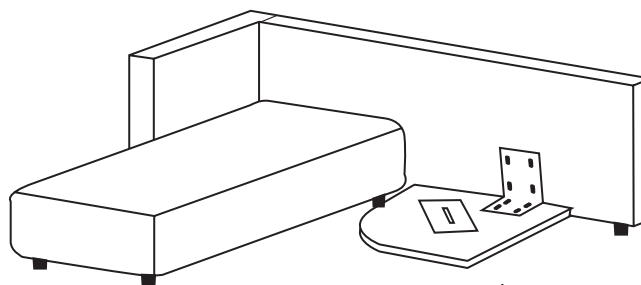



# STEP 4

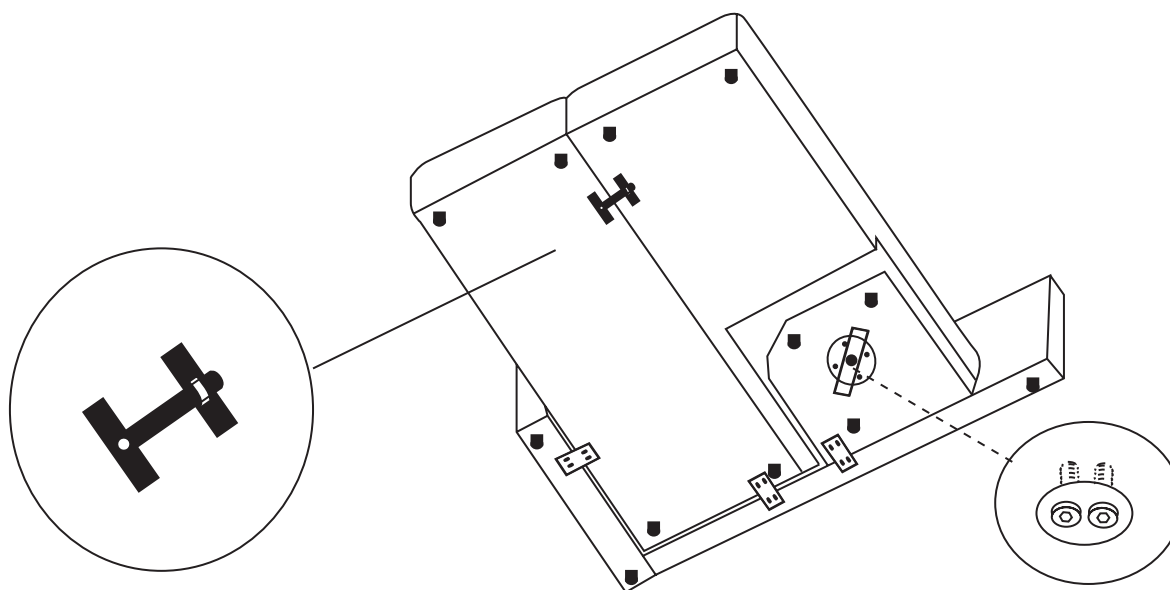



# STEP 5

