



ROVECONCEPTS

MARIA SOFA ASSEMBLY INSTRUCTIONS / INSTRUCTIONS DE MONTAGE

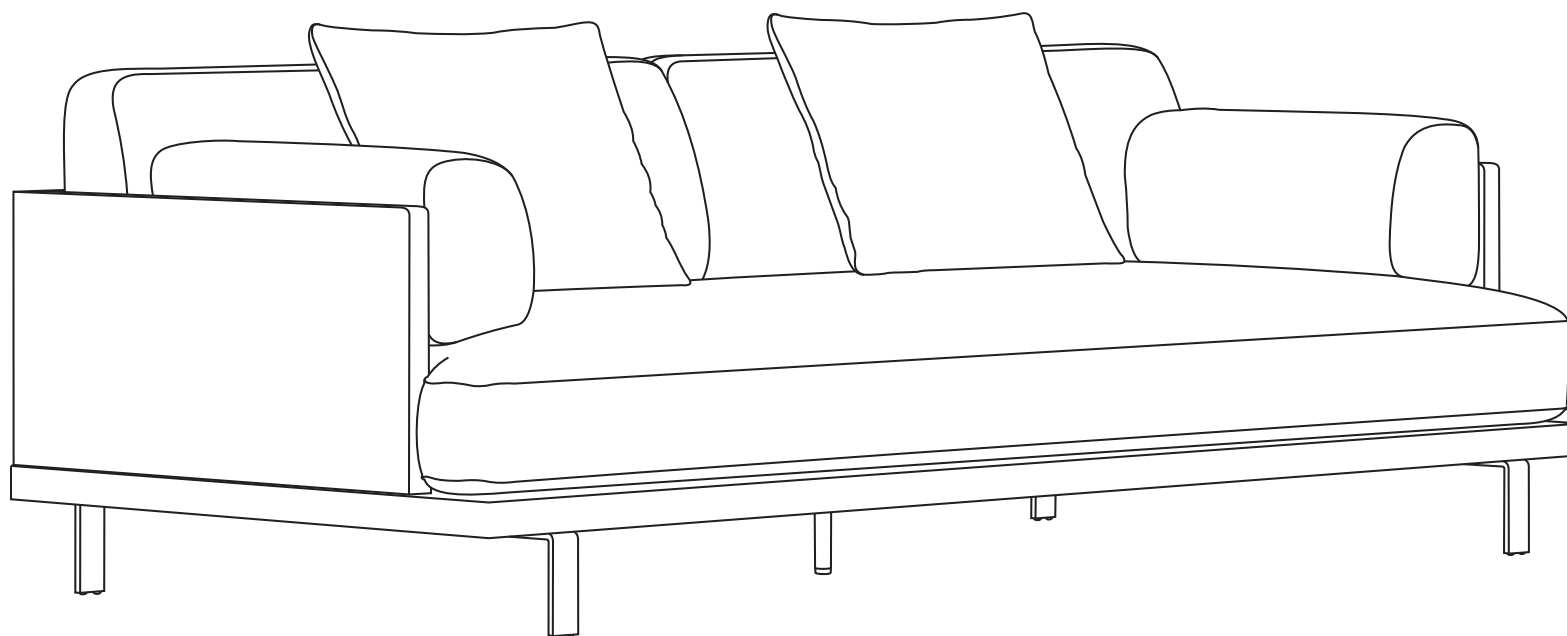

HARDWARE / QUINCAILLERIE

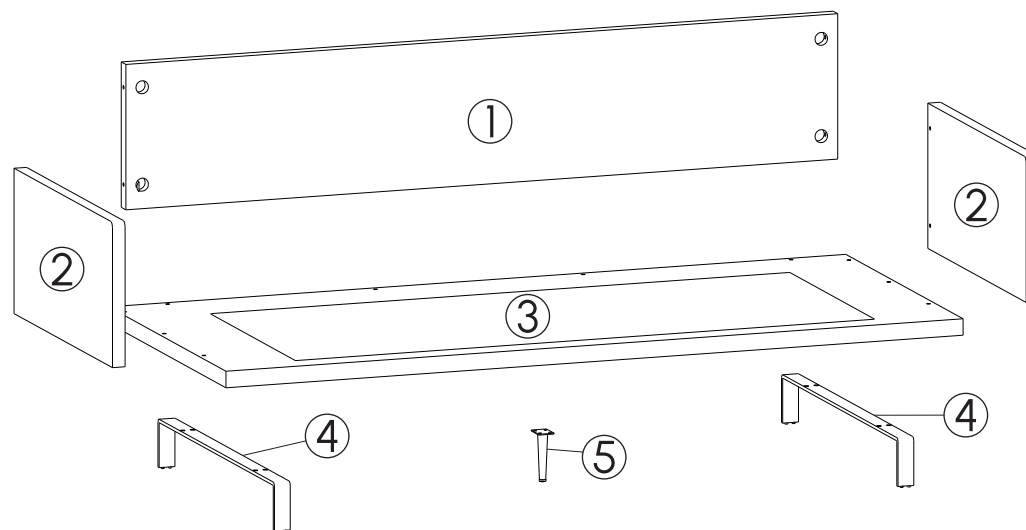


1
x1
Backrest

2
x2
Armrest

3
x1
Base

4
x2
Foot Tube

5
x1
Midfoot

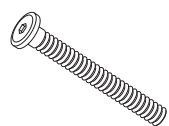


A
x10
M8*65mm




B
x8
M8*30mm



C
x4
M6*20mm



D
x4
M8*70mm



E
x4



F
x22
Ø19*1 - Ø8.5



G
x18
Ø8




H
x4
Ø16*1.5 - Ø6.5




I
x4
Ø6



J
x4
M8



K
x4
Self Adhesive Sticker





L
x1





M
x1



STEP 1

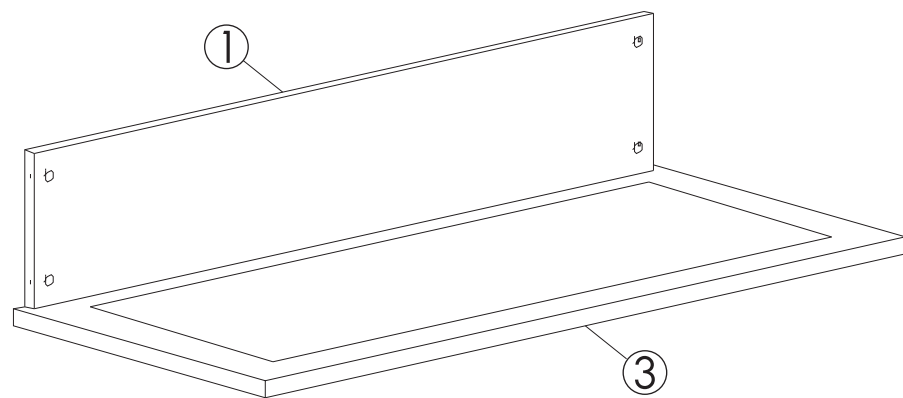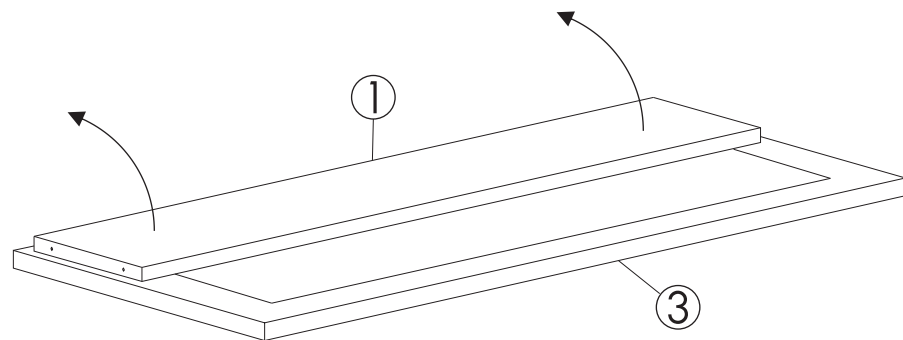



STEP 2

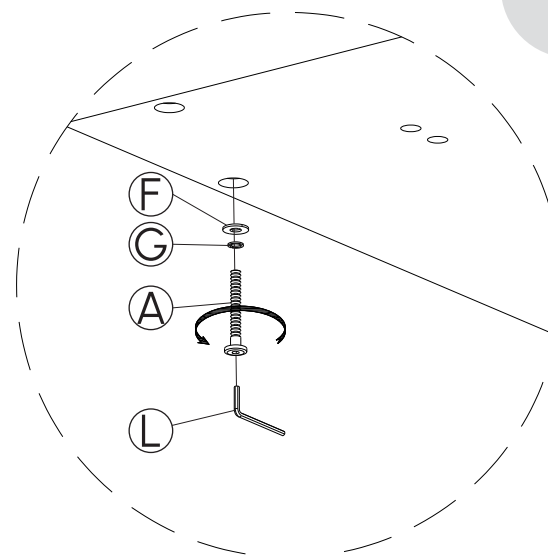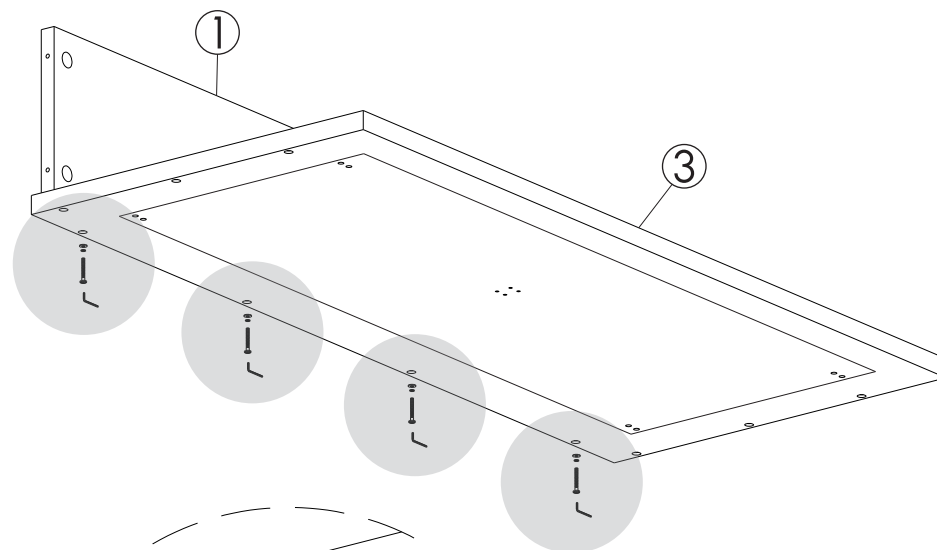

STEP 3

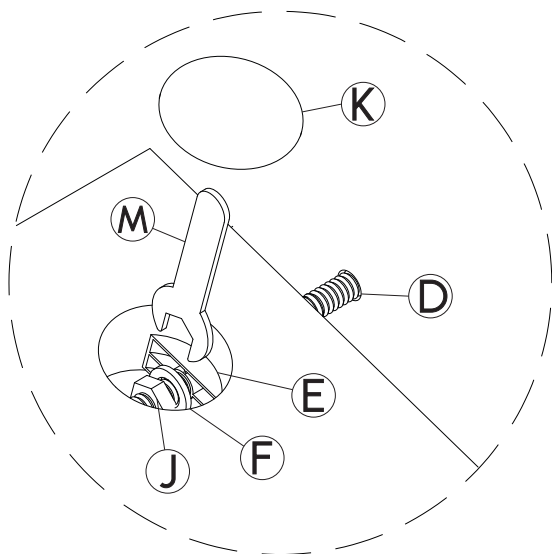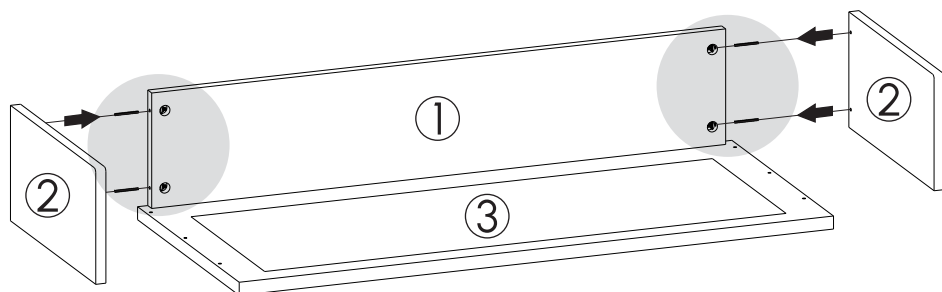


STEP 4

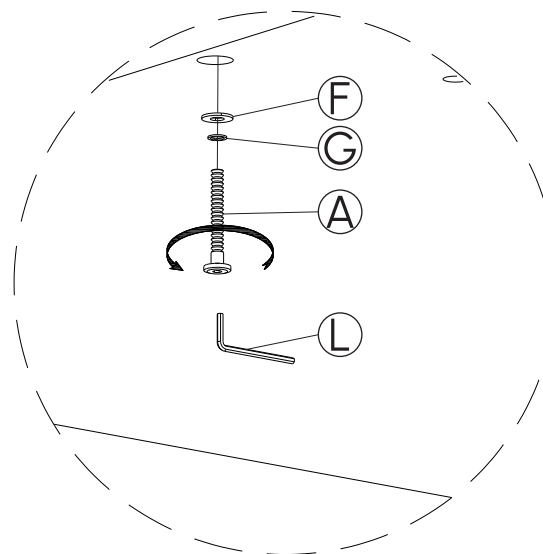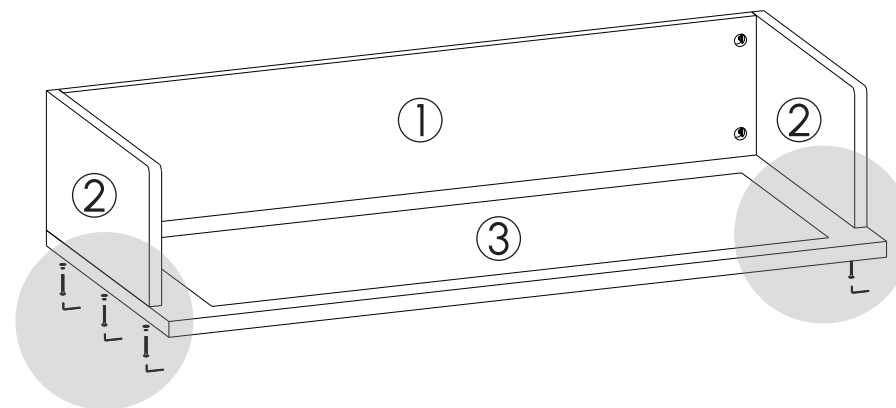

ROVECONCEPTS

MARIA SOFA ASSEMBLY INSTRUCTIONS / INSTRUCTIONS DE MONTAGE

STEP 5

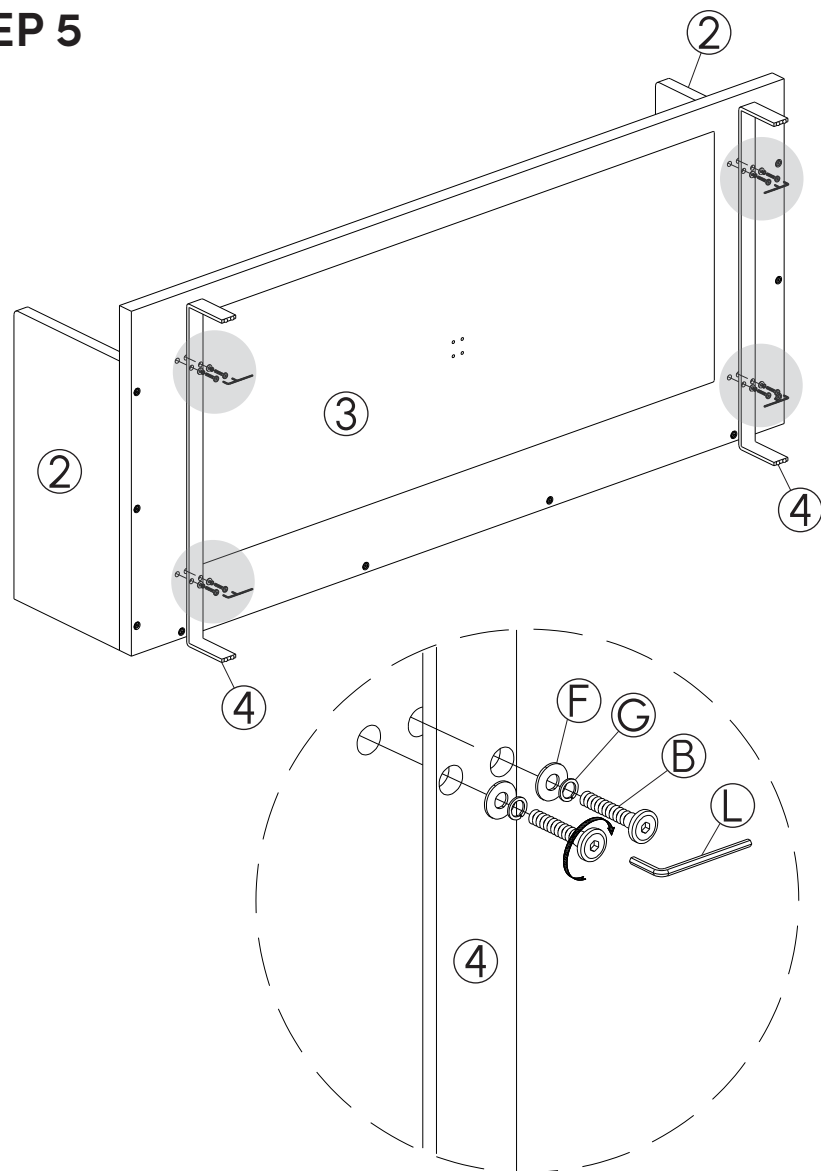

STEP 6

