


# ROVECONCEPTS

Refined Luxury Living

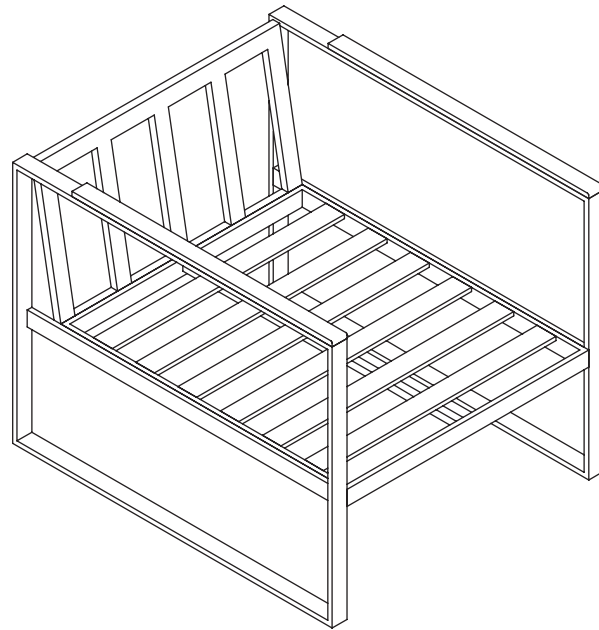

## **LOUIS OUTDOOR ARMCHAIR ASSEMBLY INSTRUCTIONS**

# HARDWARE



**A**

x1



**B**

x8  
Washer




**C**

x8  
M6\*25mm




**D**


x8

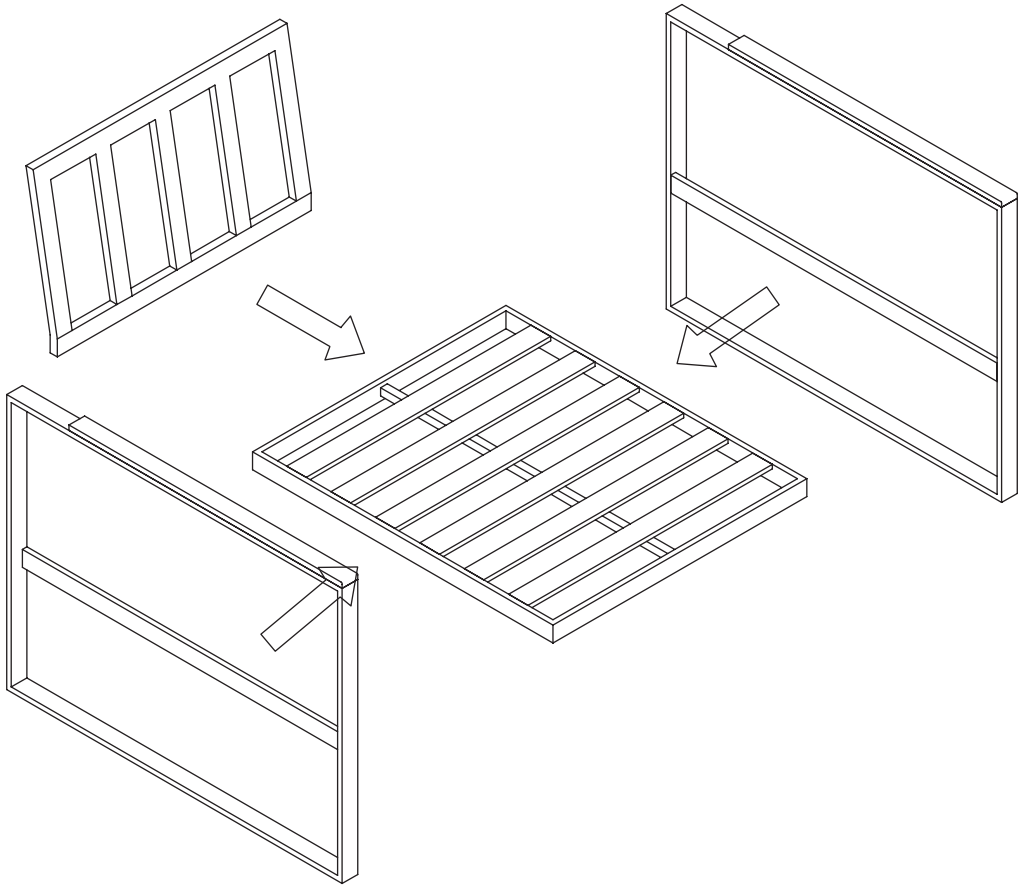


# STEP 1

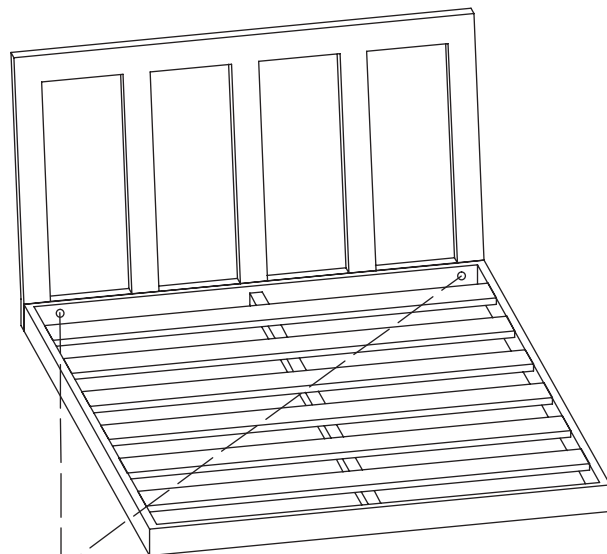

**B**



**C**




**D**



Fix all screws as shown

# STEP 2

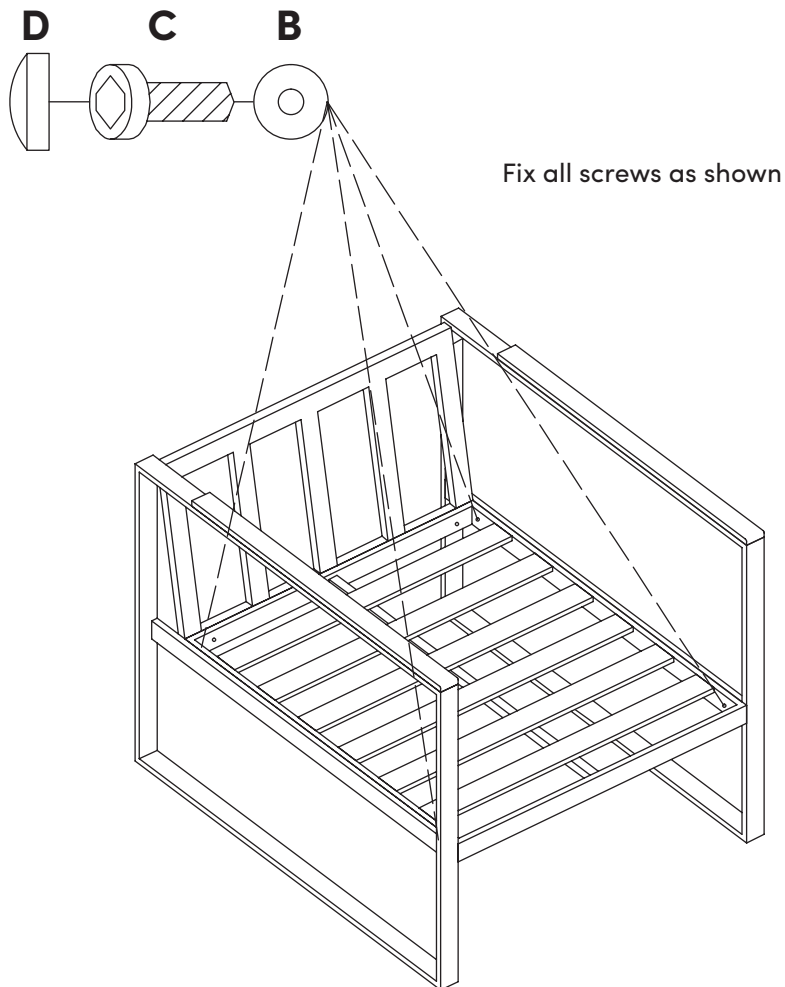

# STEP 3

