



ROVECONCEPTS

Refined Luxury Living

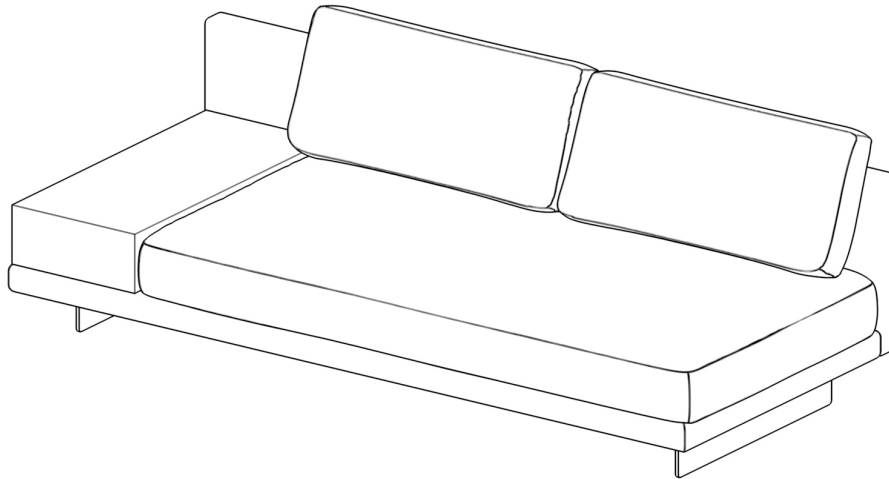


OUTDOOR DRESDEN ARMLESS SOFA ASSEMBLY INSTRUCTIONS

HARDWARE

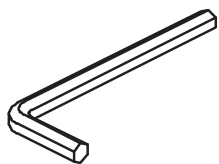

A

x1
M5




B

x8
M8*25



C

x8
Ø17* Ø10*2

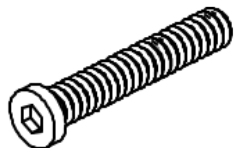


D

x2
M6*120




E

x2
Ø13* Ø6*1

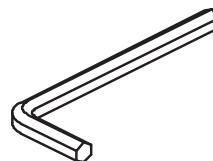

F


x1
M4

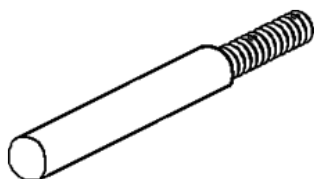


G

x1
Support Leg

STEP 1

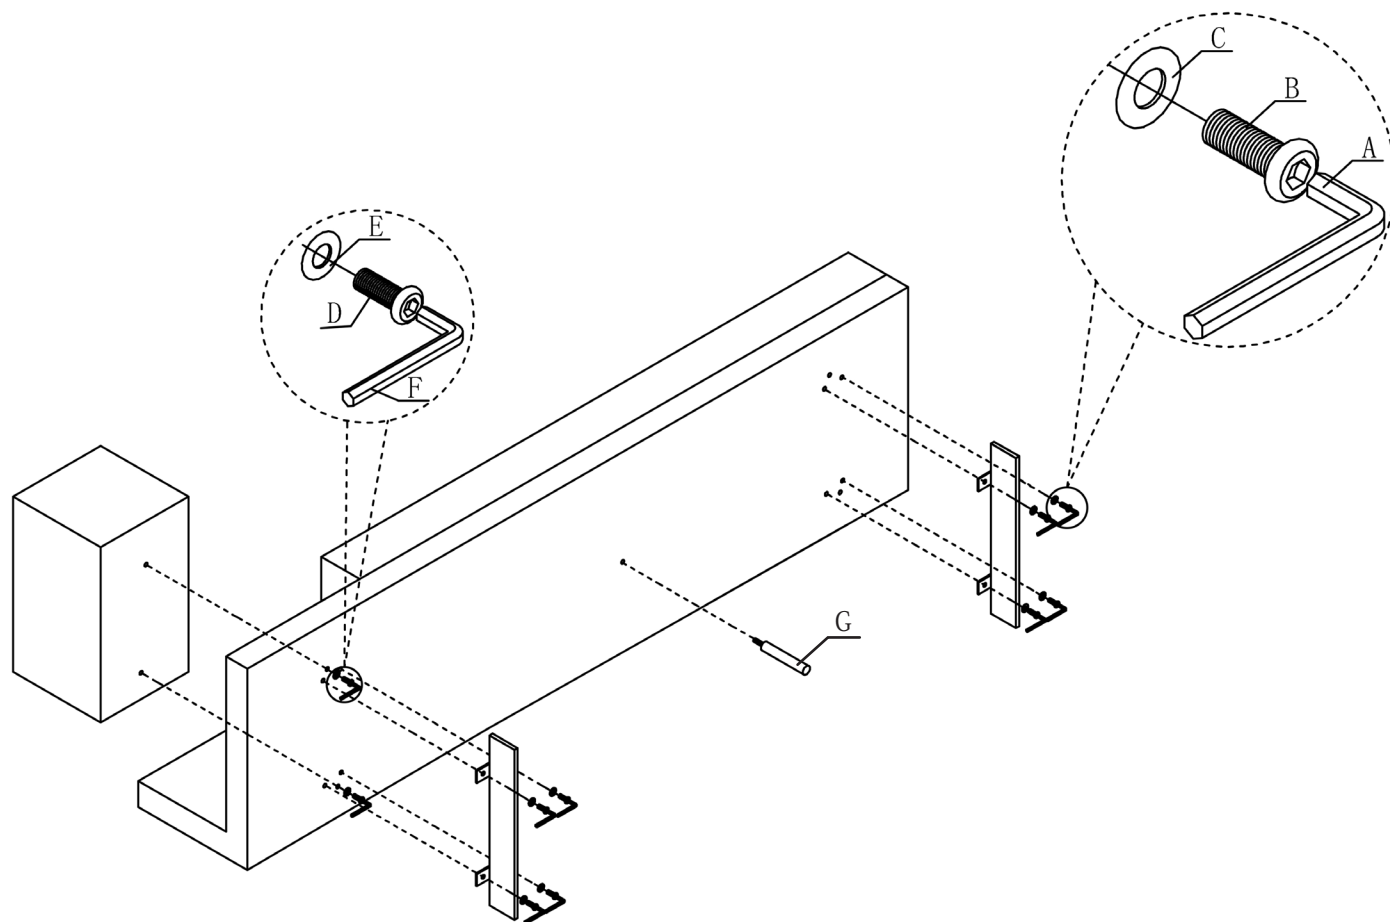


STEP 2

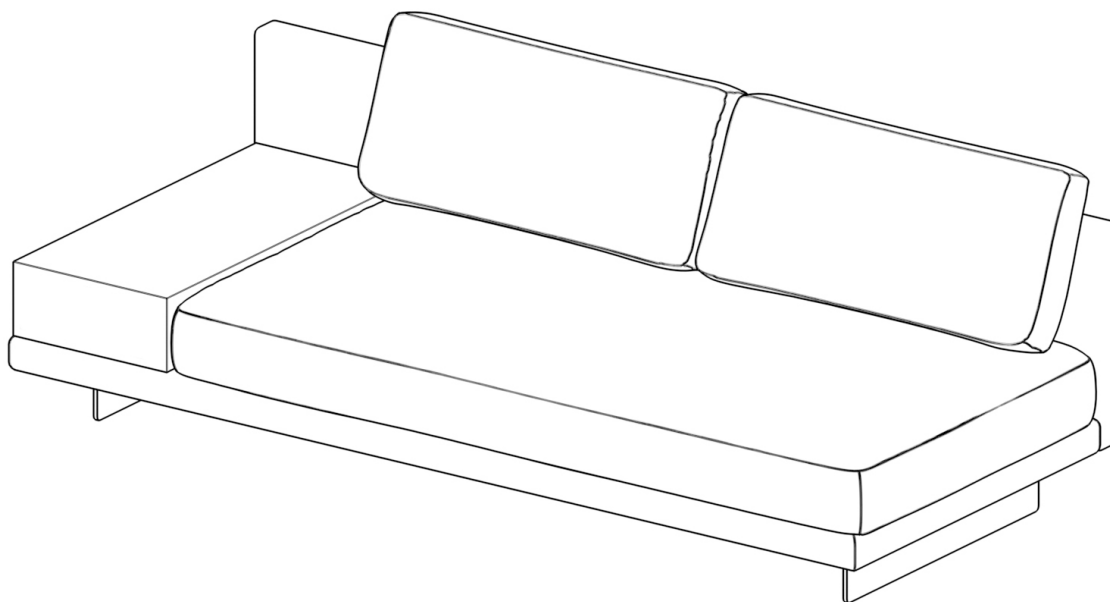


ROVECONCEPTS

Refined Luxury Living

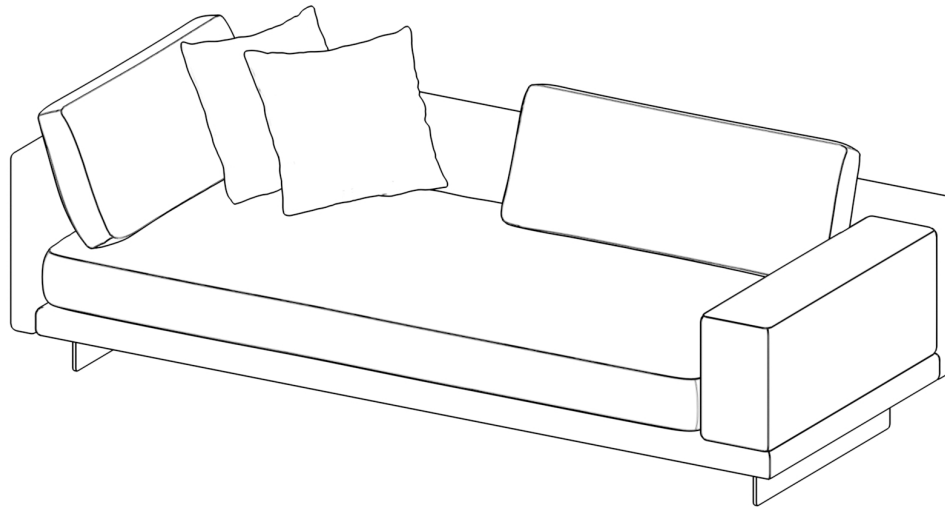


OUTDOOR DRESDEN LEFT/RIGHT ARM SOFA ASSEMBLY INSTRUCTIONS

HARDWARE

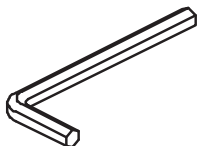

A

x1
M5




B

x8
M8*25



C


x8
Ø17* Ø10*2

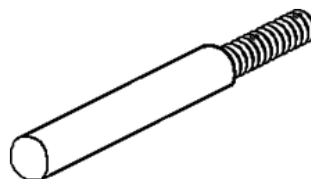


D

x1
Support Leg

STEP 1

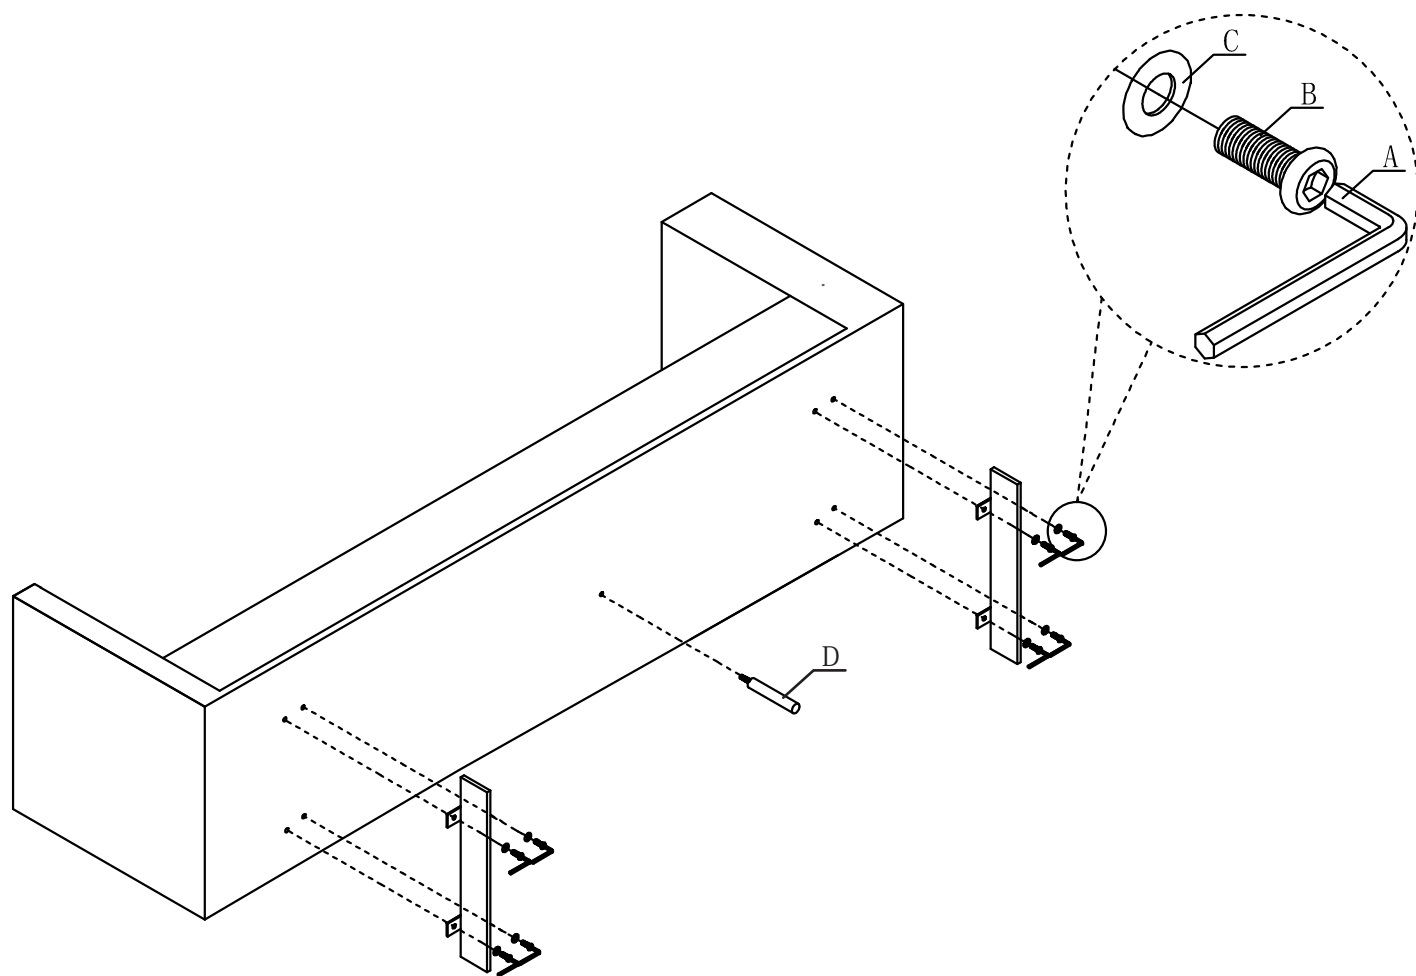


STEP 2

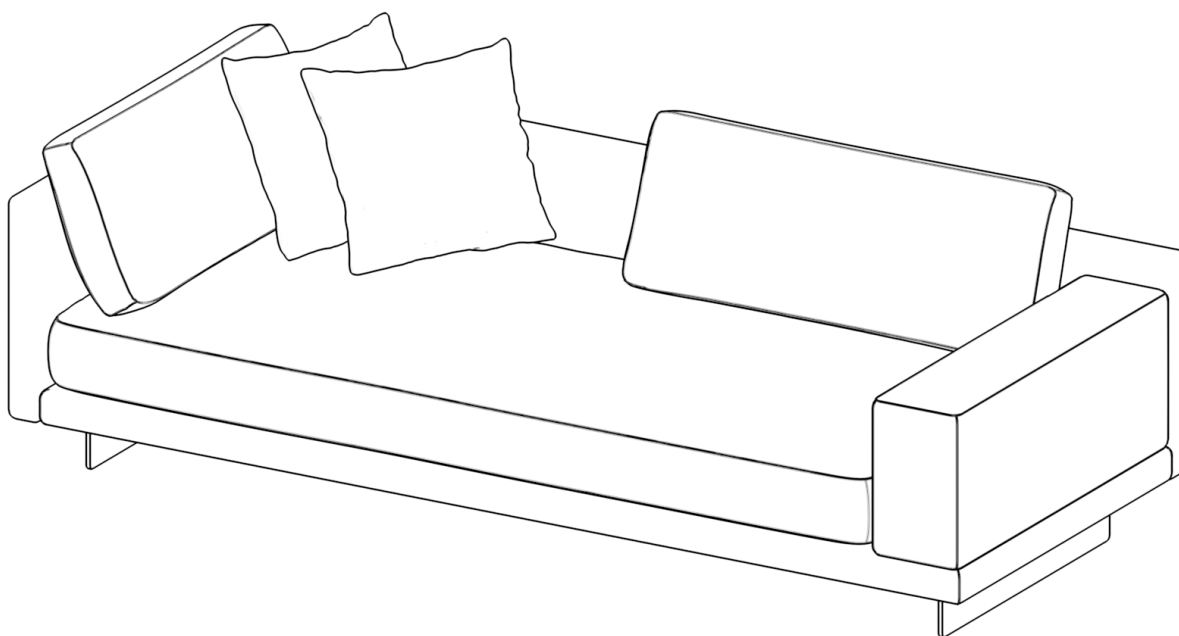


ROVECONCEPTS

Refined Luxury Living

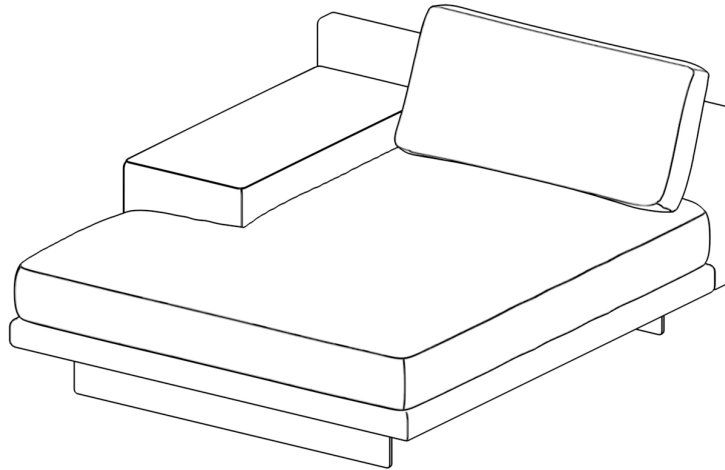


**OUTDOOR DRESDEN LEFT/RIGHT
CHAISE WITH ARMREST
ASSEMBLY INSTRUCTIONS**

HARDWARE

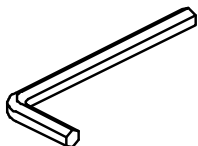

A

x1
M5



B


x8
M8*25




C

x8
Ø17* Ø10*2

STEP 1

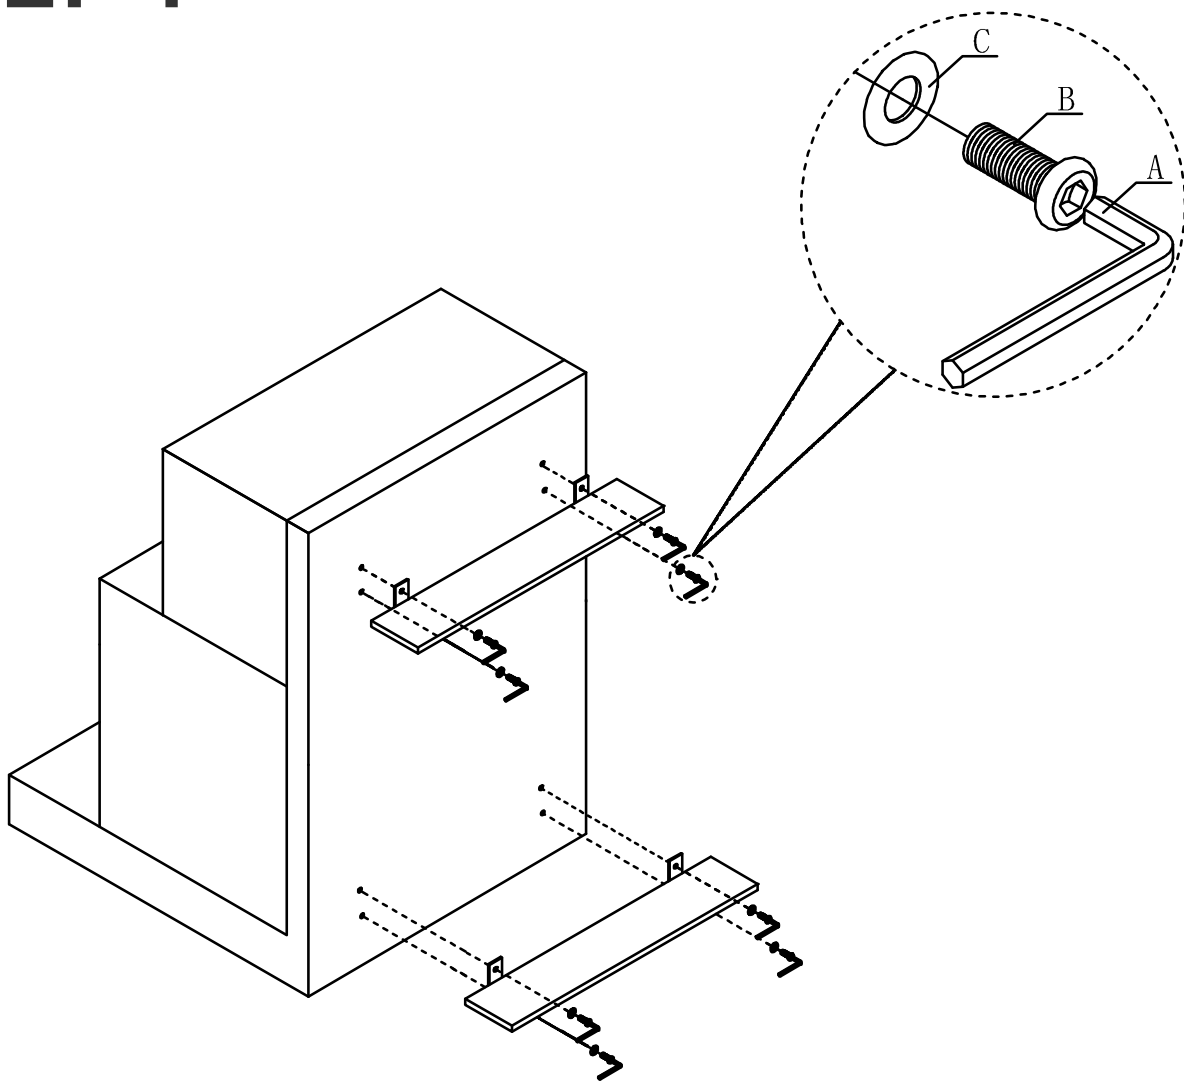


STEP 2

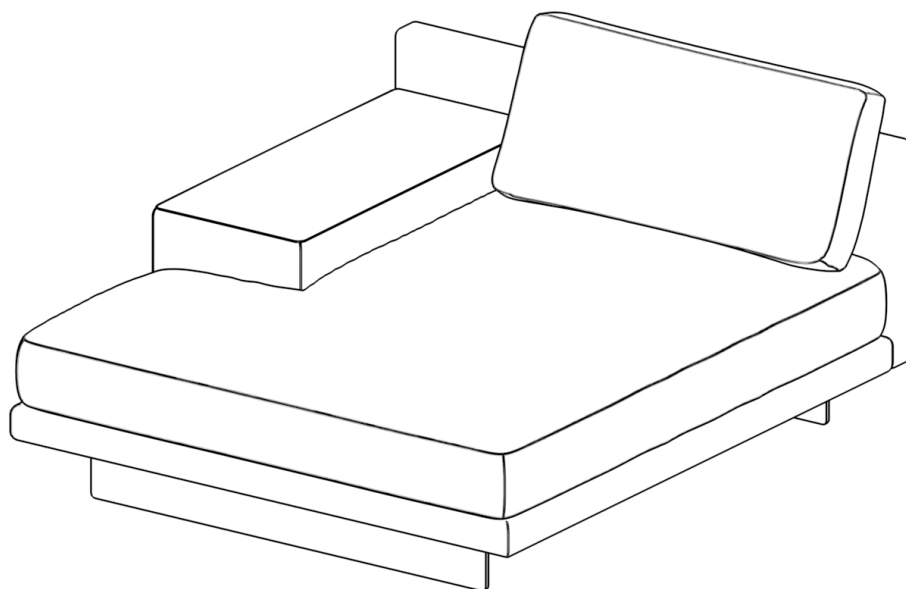


ROVECONCEPTS

Refined Luxury Living

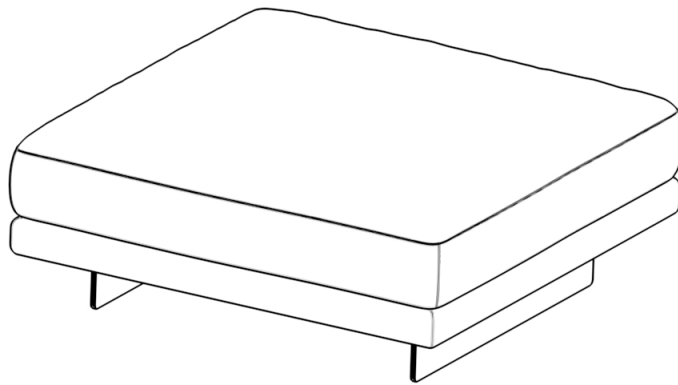


OUTDOOR DRESDEN OTTOMAN ASSEMBLY INSTRUCTIONS

HARDWARE

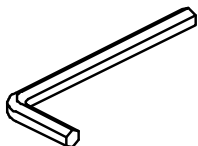

A

x1
M5



B


x8
M8*25



C

x8
Ø17* Ø10*2

STEP 1

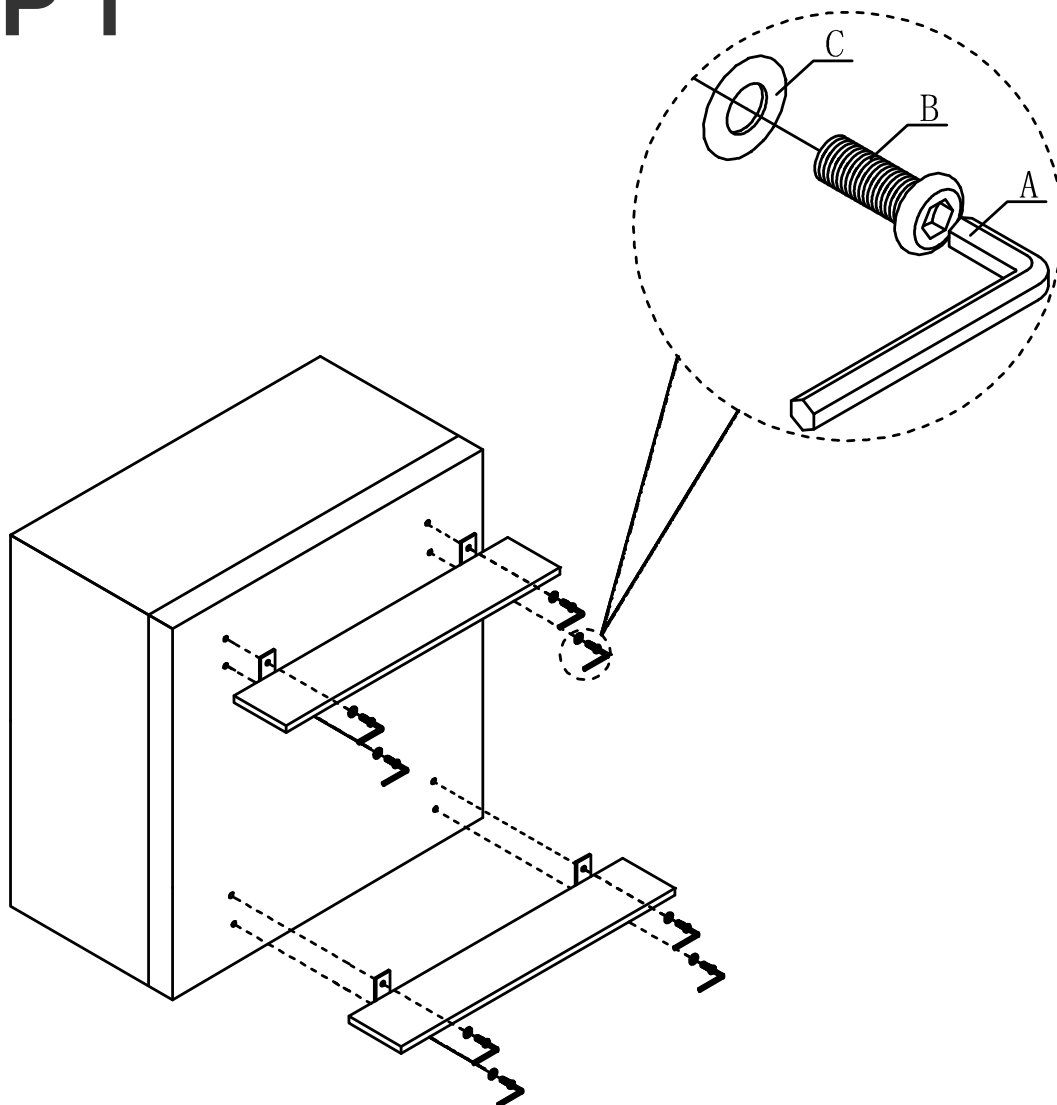

STEP 2

