



ROVECONCEPTS

kaye COLLECTION

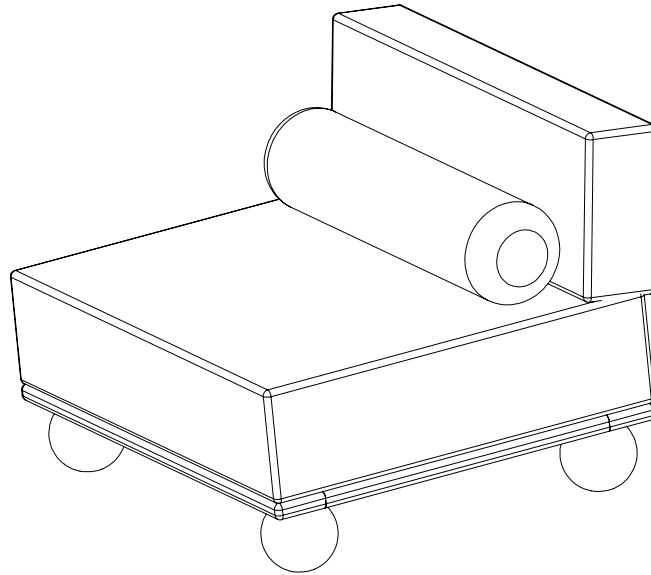

**BALI OUTDOOR ARMLESS
ASSEMBLY INSTRUCTIONS**

HARDWARE

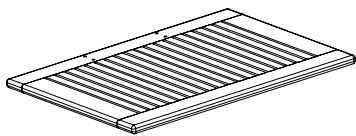


1

x1




2

x4

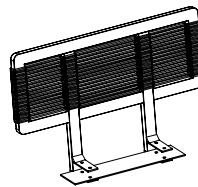


3

x1

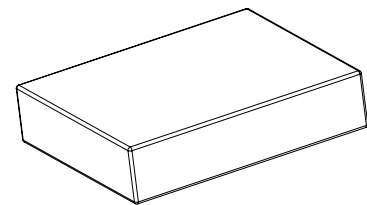


4

x1

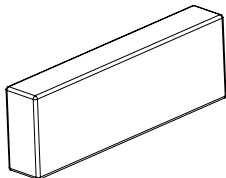


5

x1

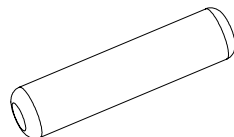

6

x1




A

x2
M8*50



B


x2
M8




C

x1
M4


STEP 1

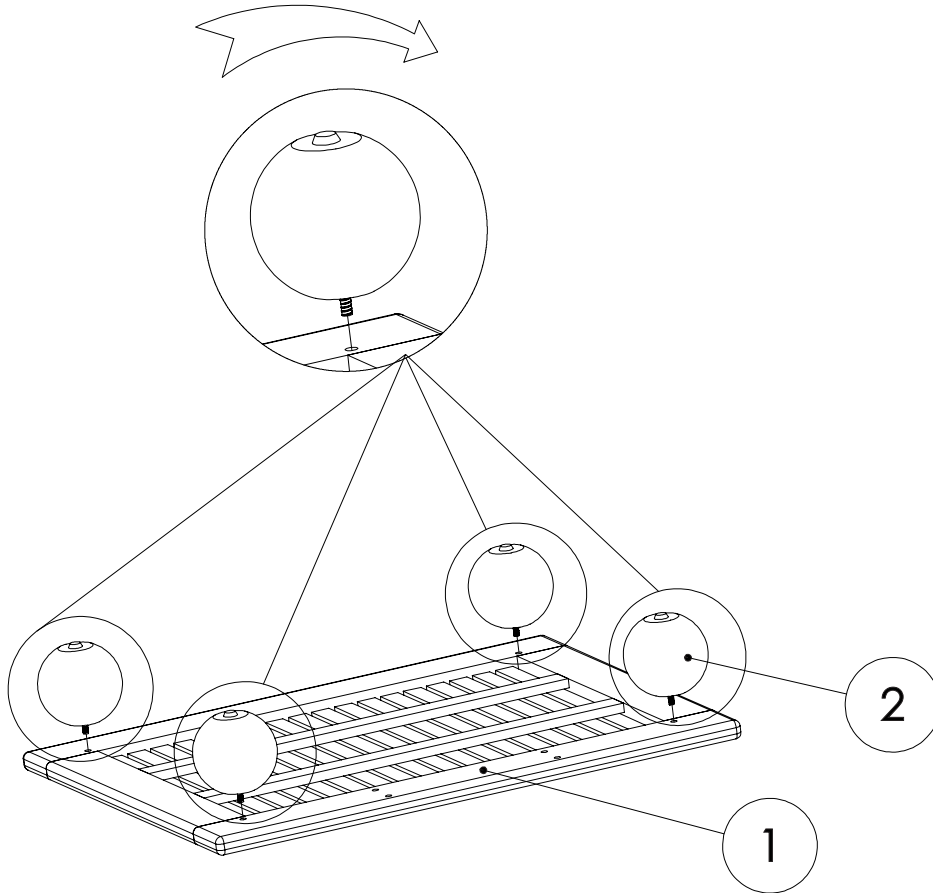


STEP 2

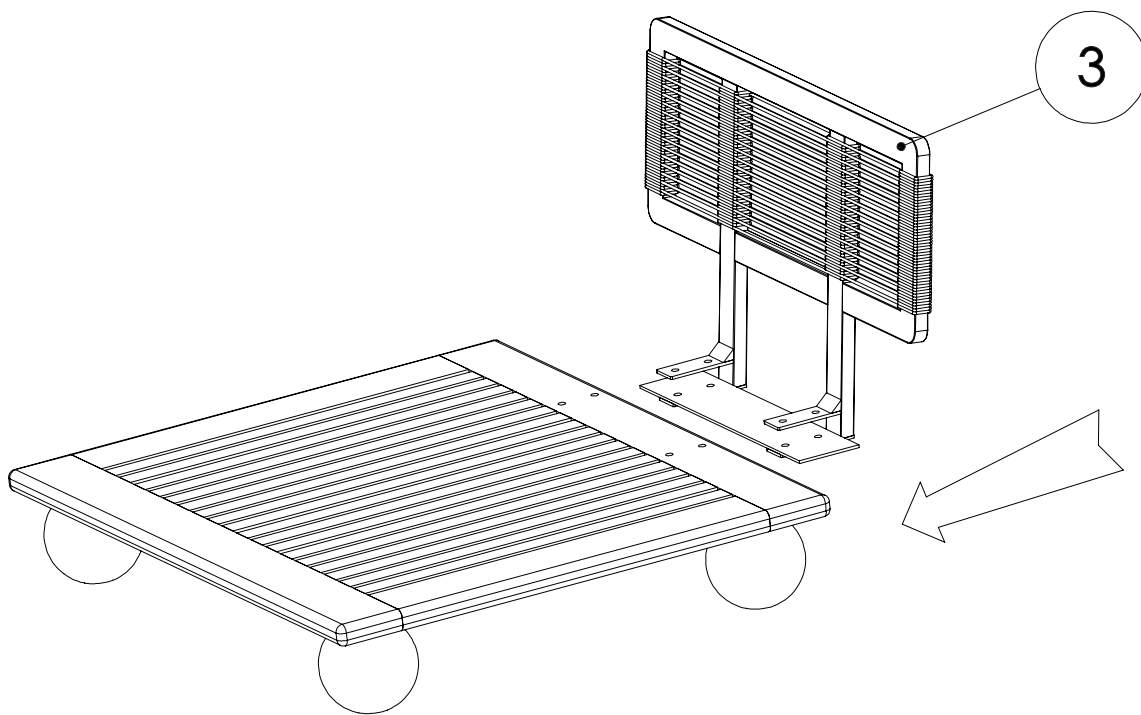


STEP 3

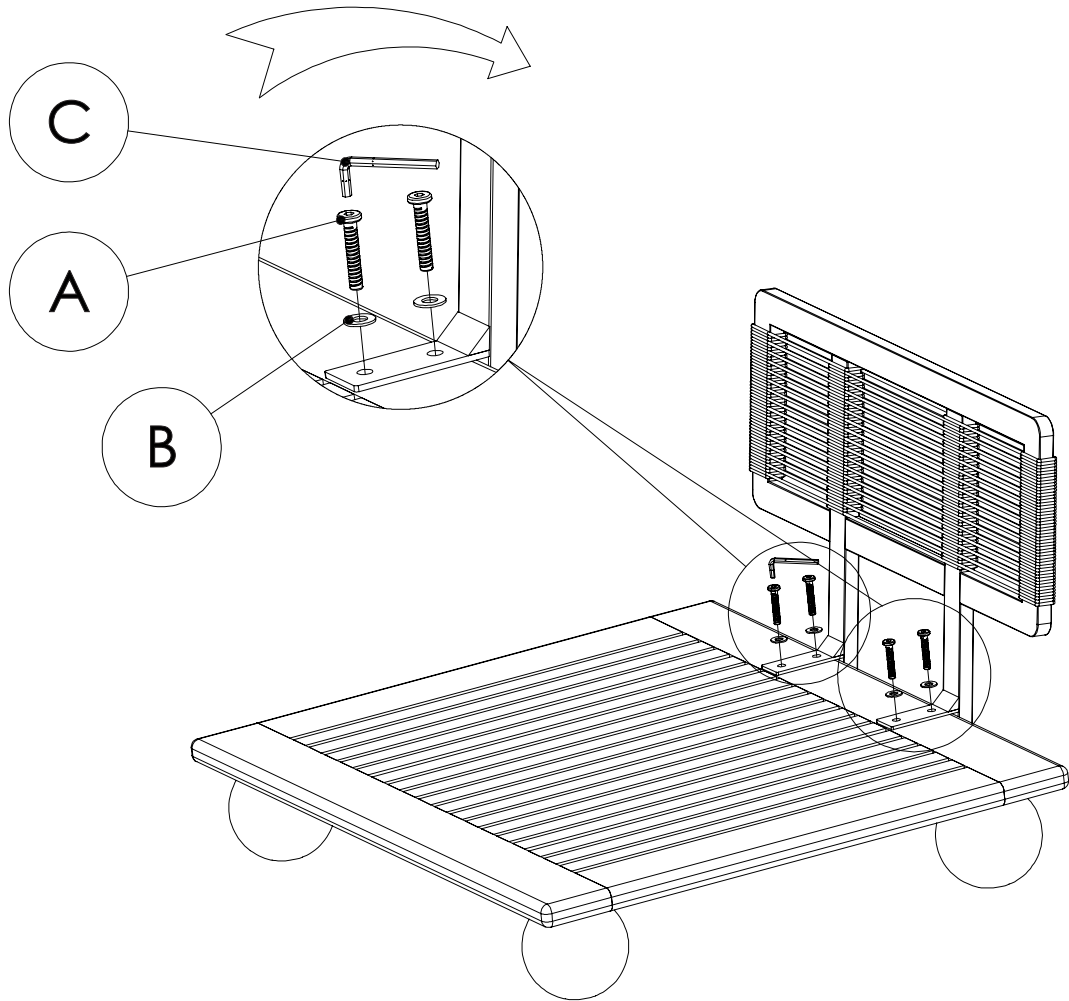


STEP 4

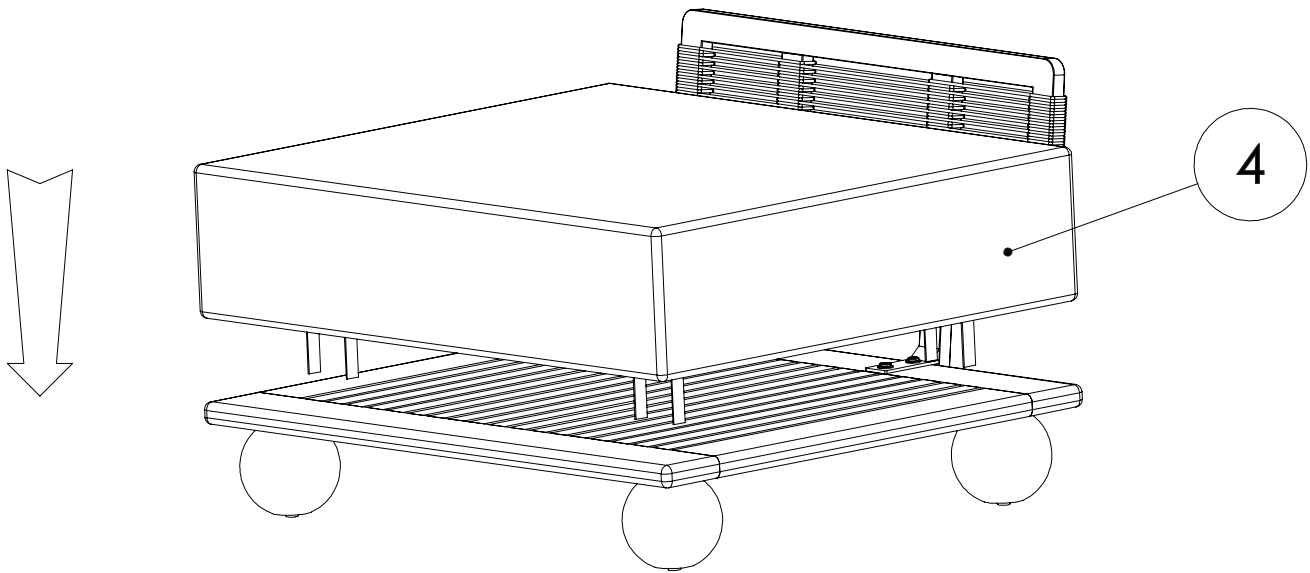

STEP 5

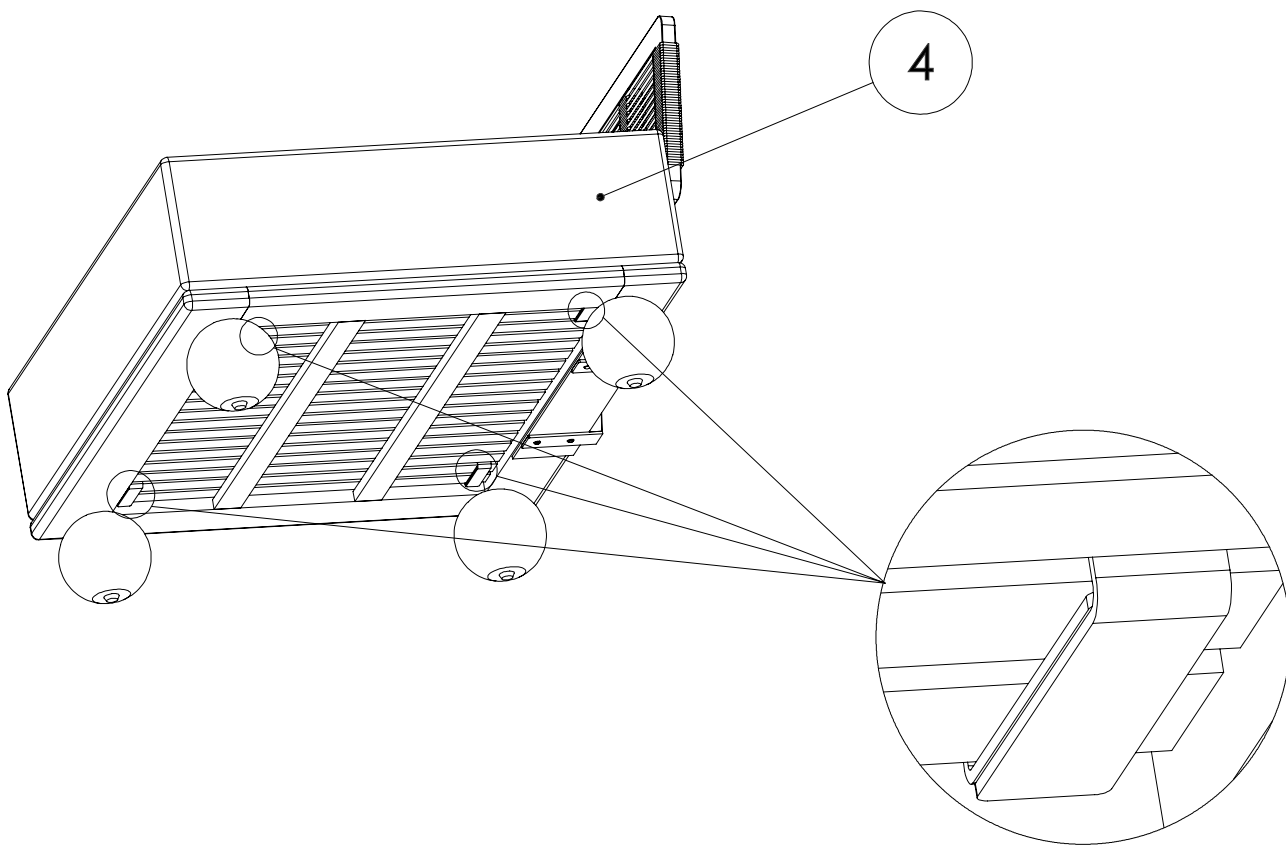


STEP 6

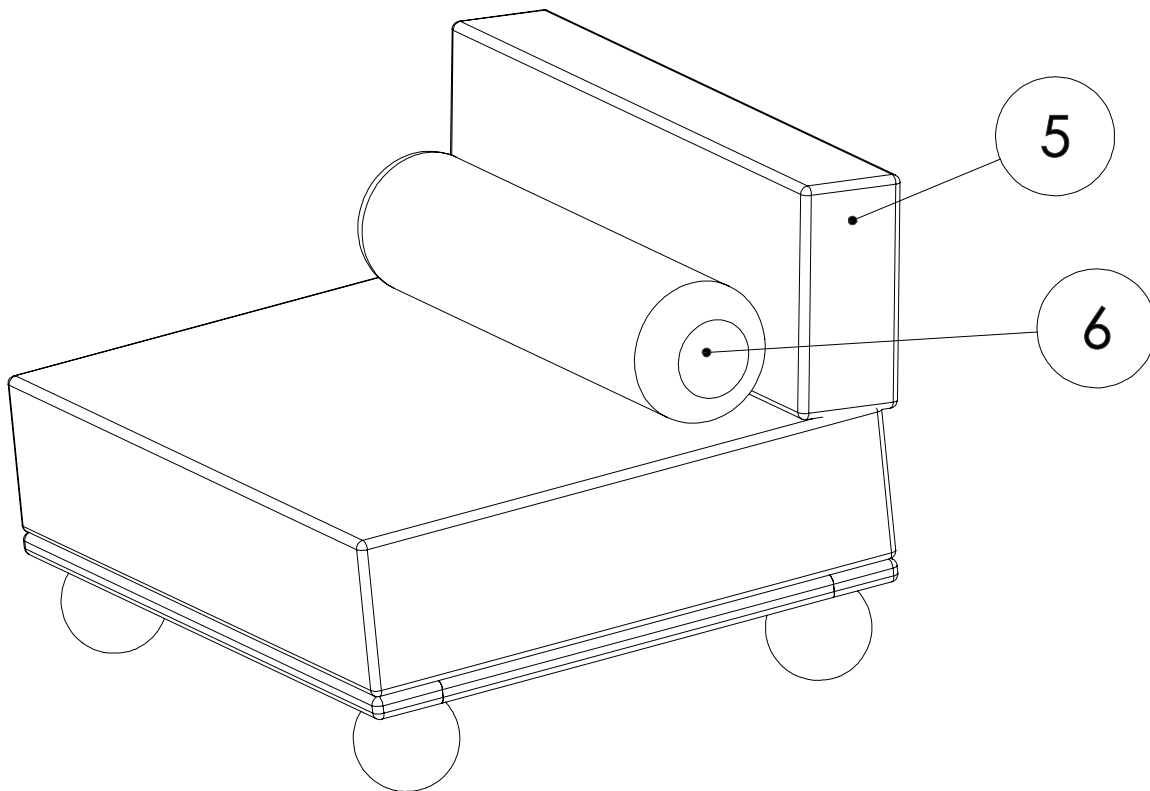

ROVECONCEPTS

BALI OUTDOOR OTTOMAN ASSEMBLY INSTRUCTIONS

HARDWARE




1

x1



2


x4

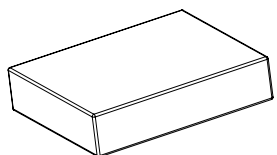


3

x1


STEP 1

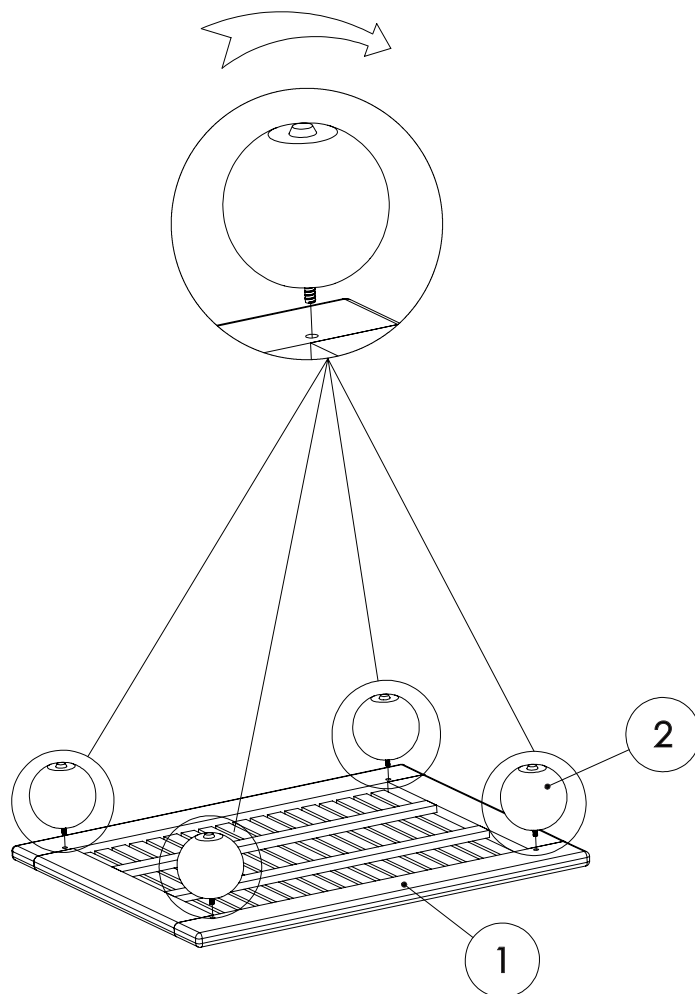


STEP 2

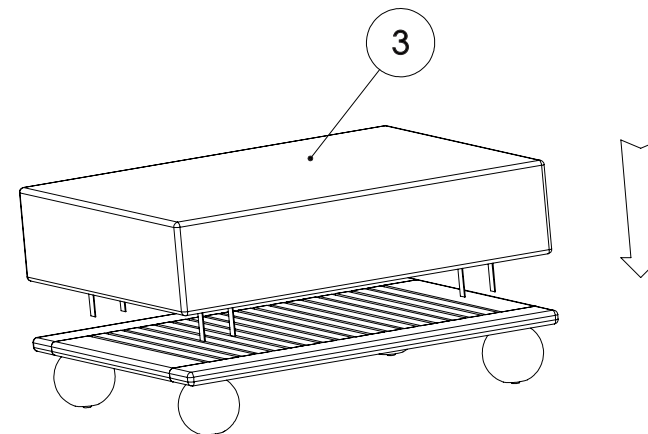

STEP 3

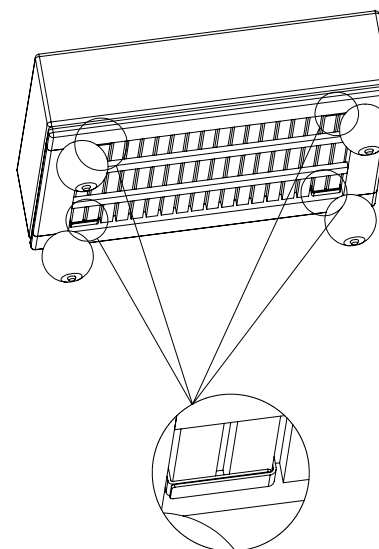

HARDWARE

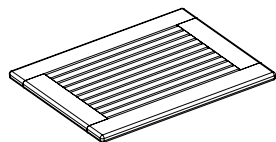

1

x1



2

x1

STEP 1

